



I3FL KammBar Instructions

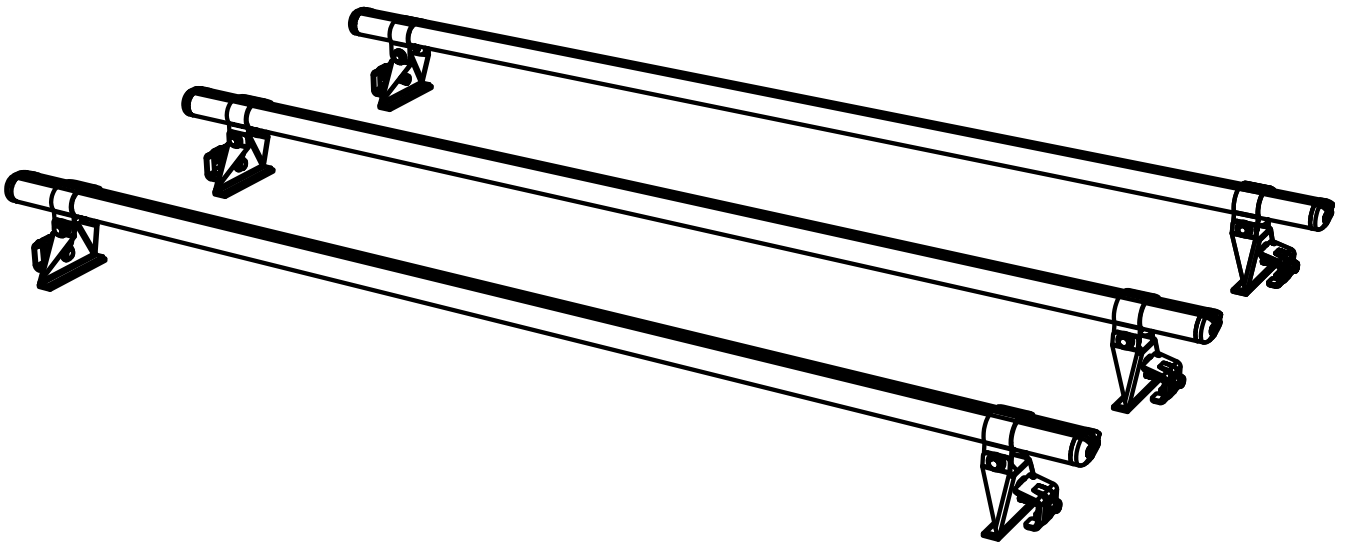

CITY CRASH (✓)




According to ISO/ PAS 11154:2006

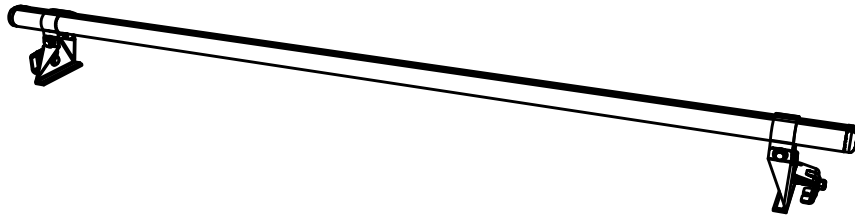


KammBar Fleet x 1
3.1kg/6.8lbs




Max
50kg/110lbs

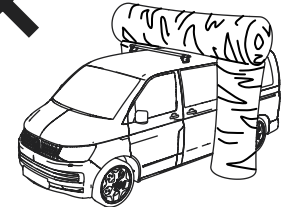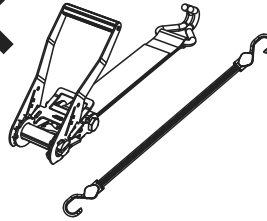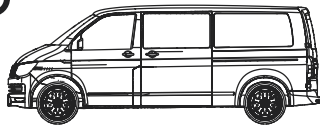


KammBar Fleet

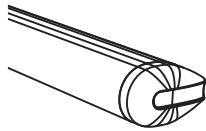

SA395 x 3

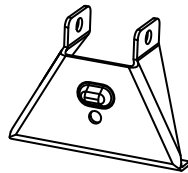

MS1632 x 6

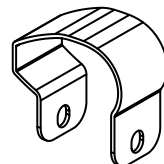


MS1142 x 6




SA070 x 4
optional upgrade


Fitting Kit

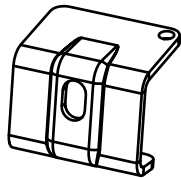

20186003 x 6




FW002 (M8) x 24

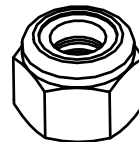


FN006 (M8) x 12



PS006-120 x 6




FB003 (M8
x 65) x 6




FS081 (M8
x 50) x 6


1.

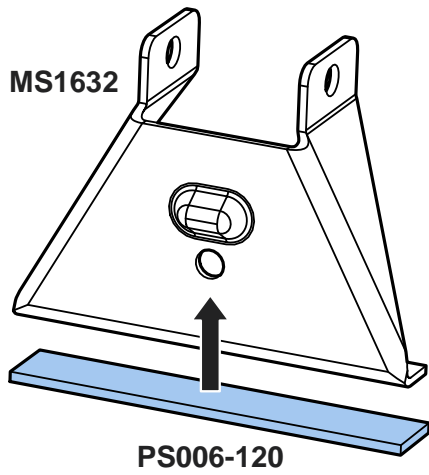


2.

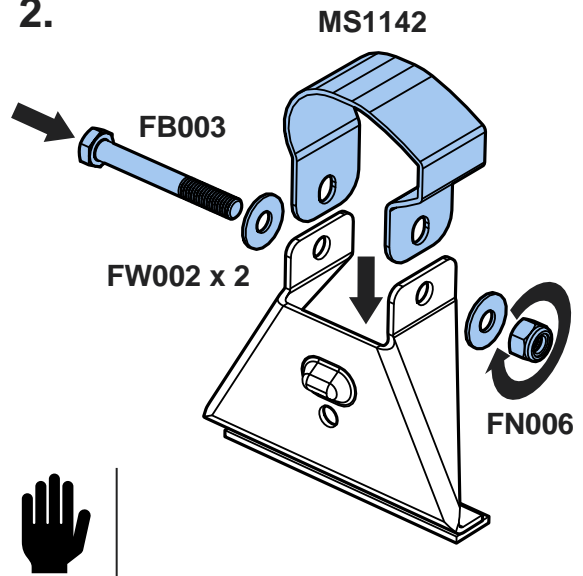


3.

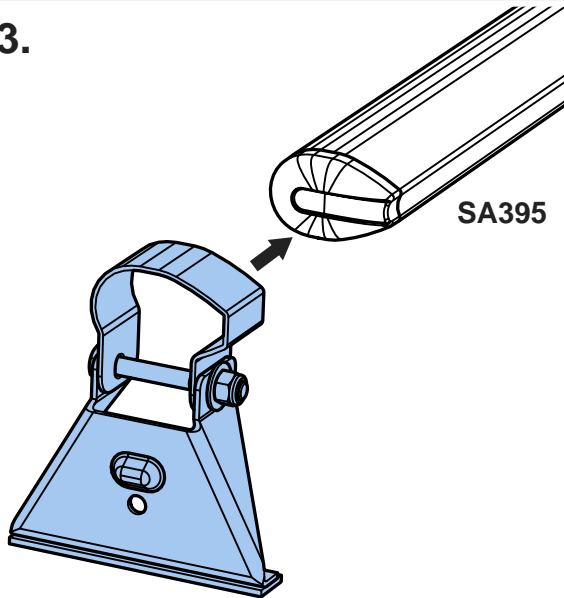

4.

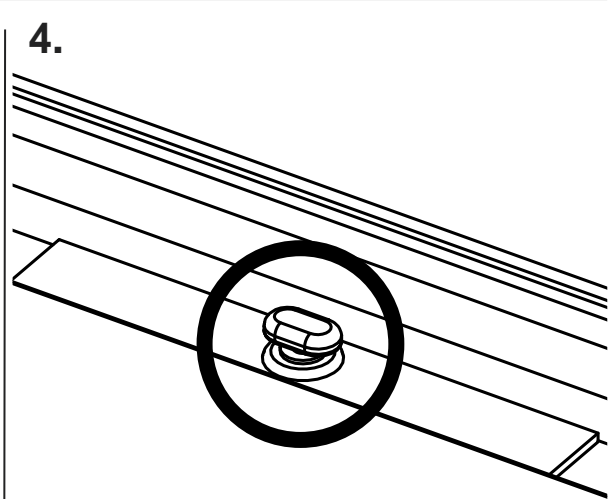

5.

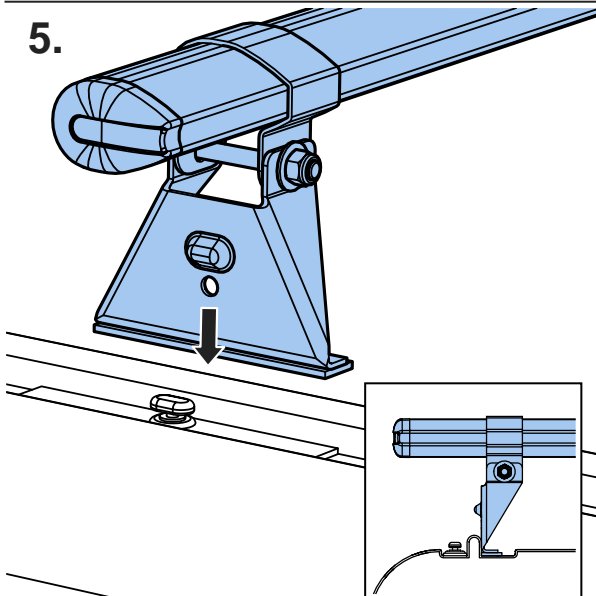

6.

