


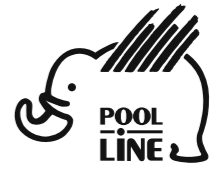

- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj








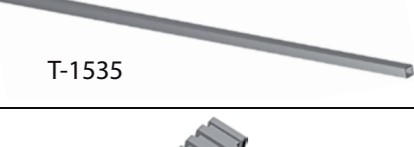






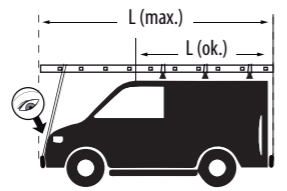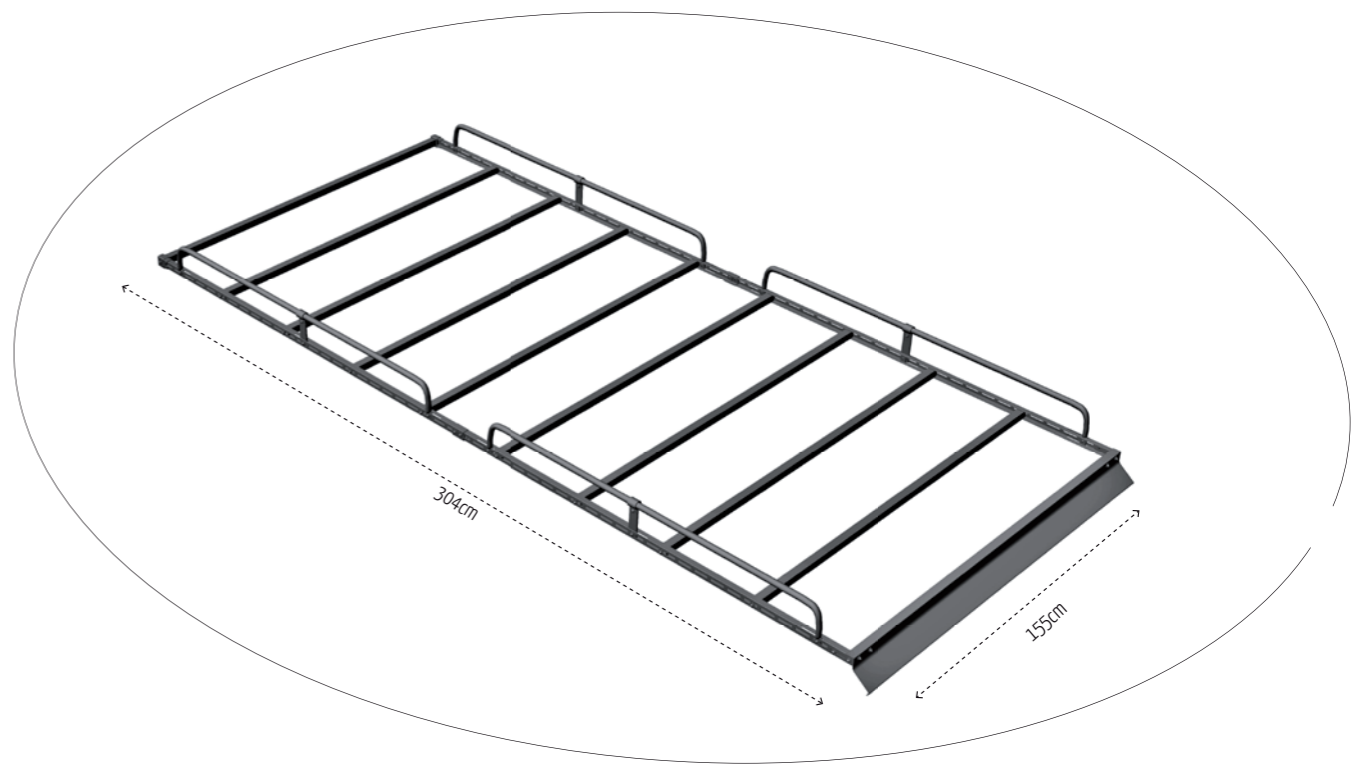





POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net


200 KG. MAX.
Nº HOMOLOGACIÓN: E9 26R-03.1042
<div style="display: flex; justify-content: space-around; align-items: center;"> </div> RECICLABLE

123615

Rv: 06/2020




N		Q
1	 S-150	1
2	 L-1540	4
3	 B-1262	4
4	 T-1535	9
7		18
8		2
9		2
10		8
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x40	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4

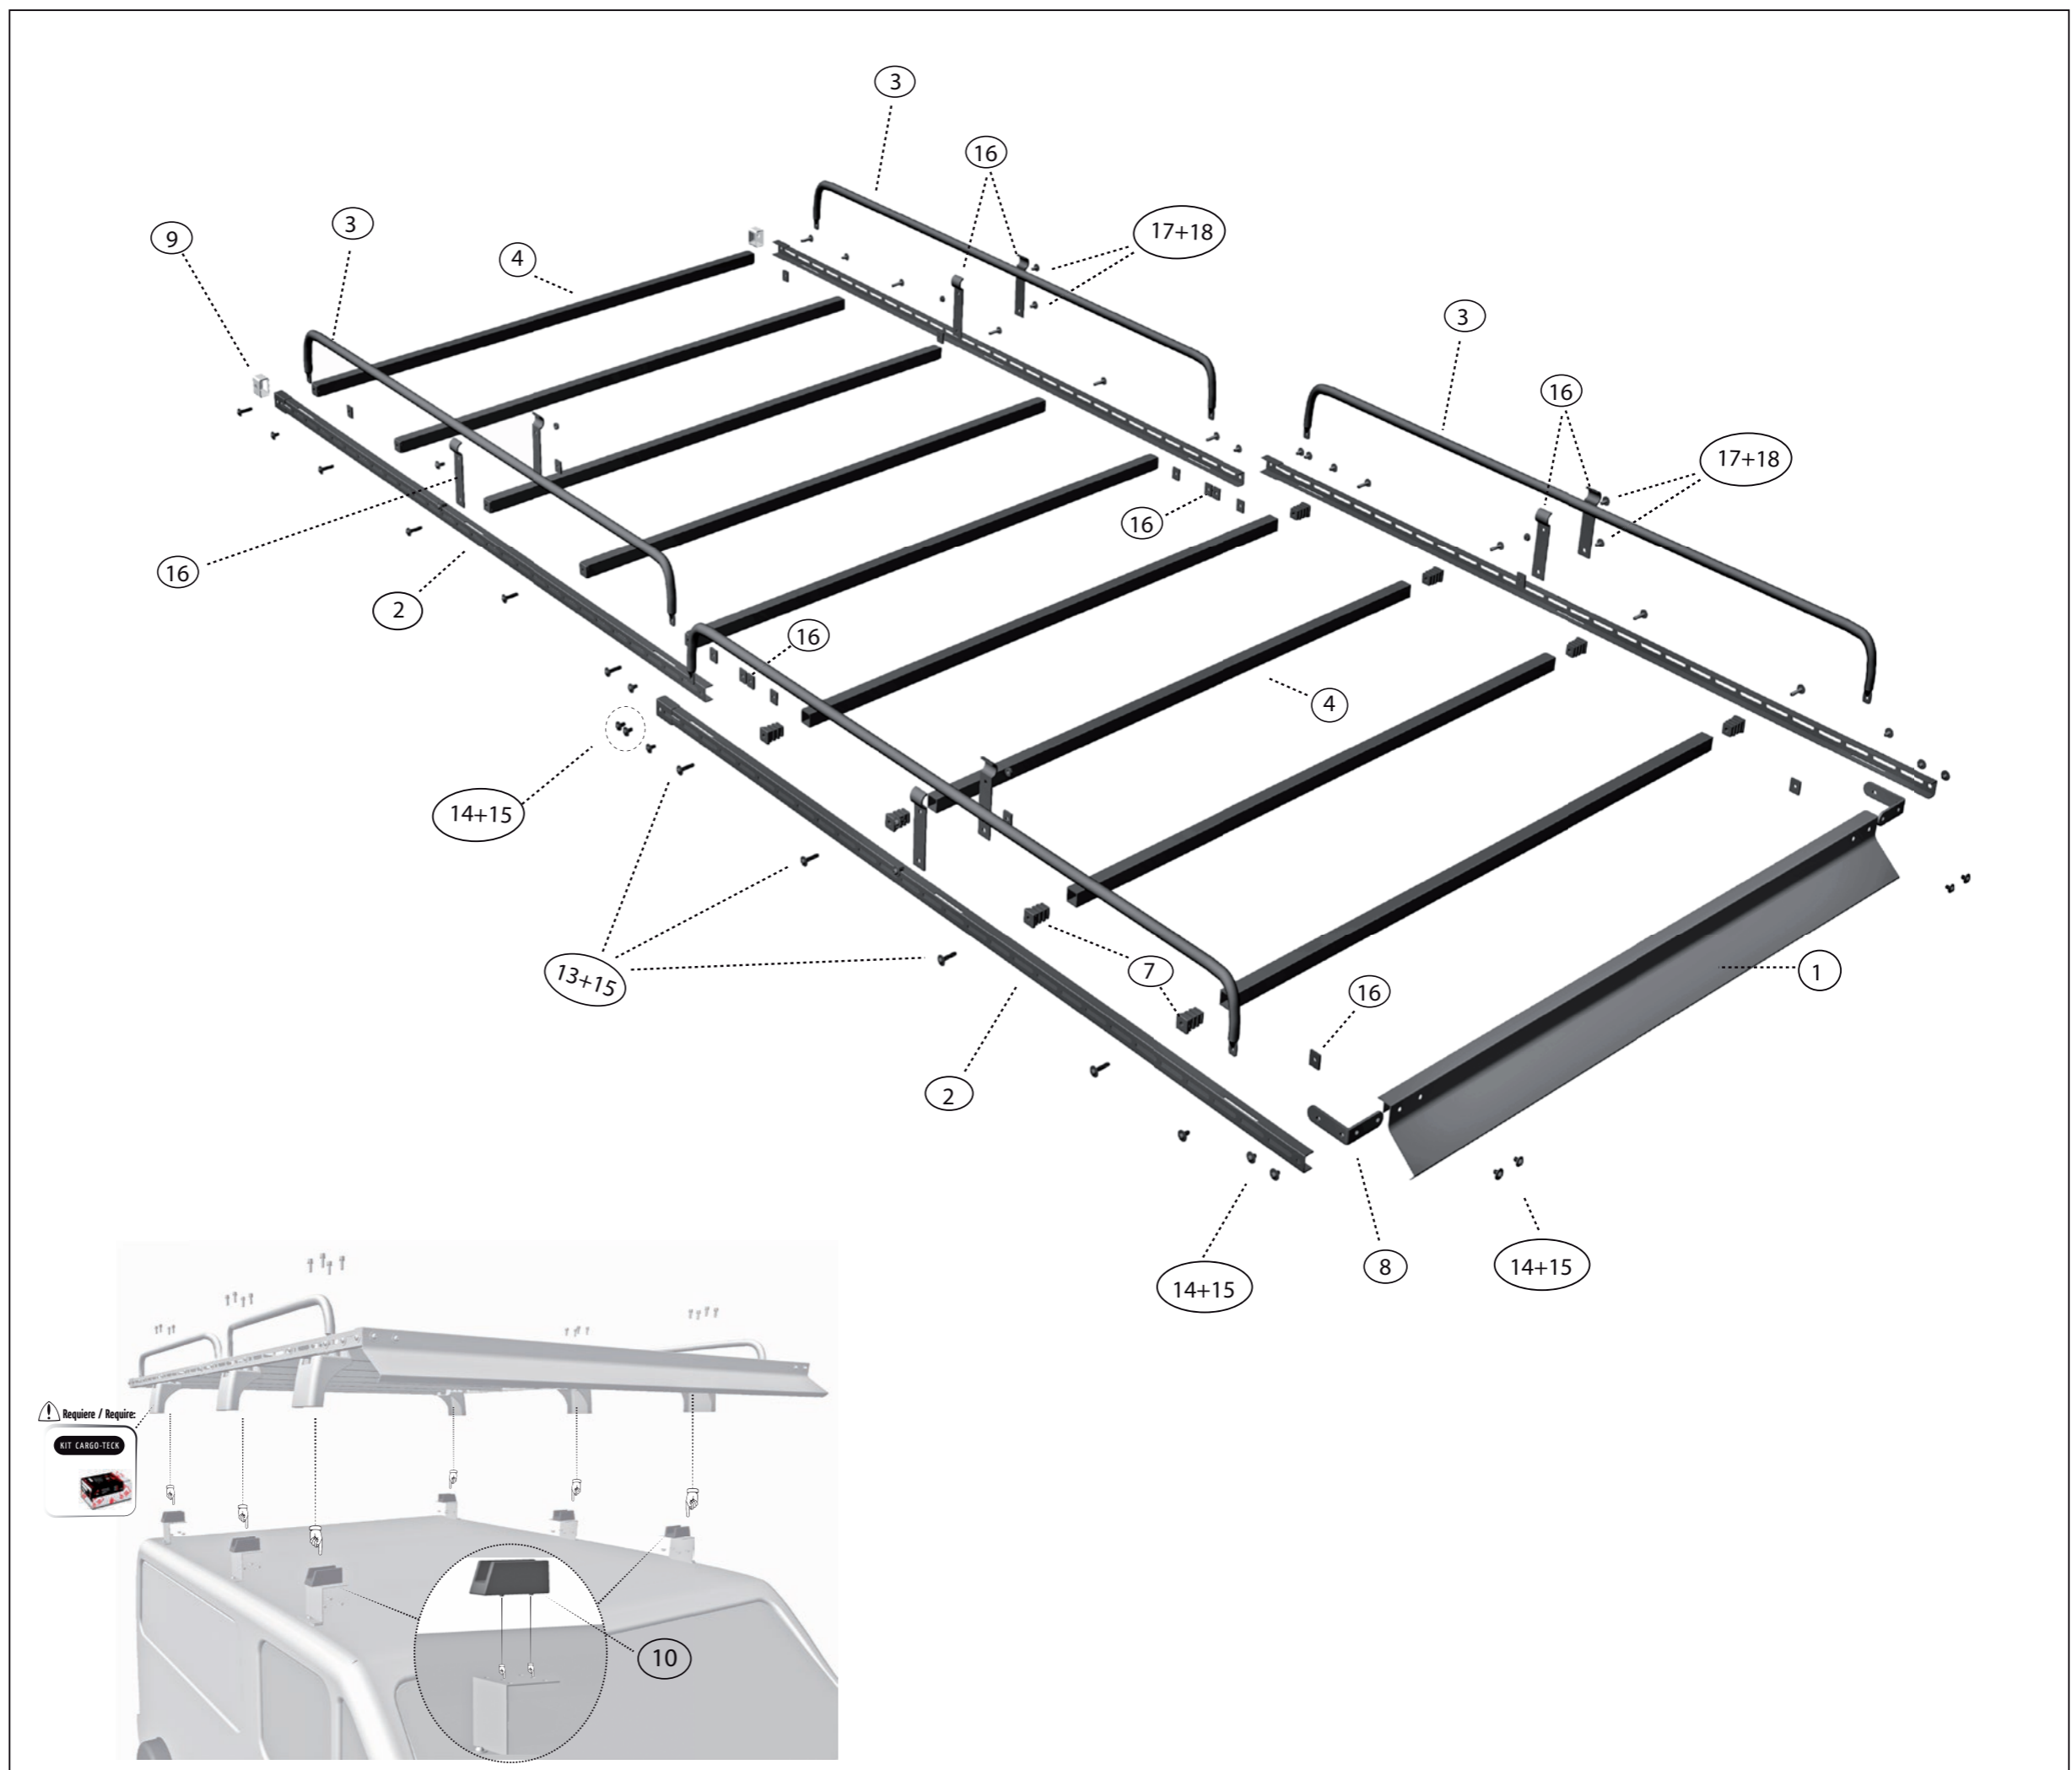





KIT CARGO-TECK

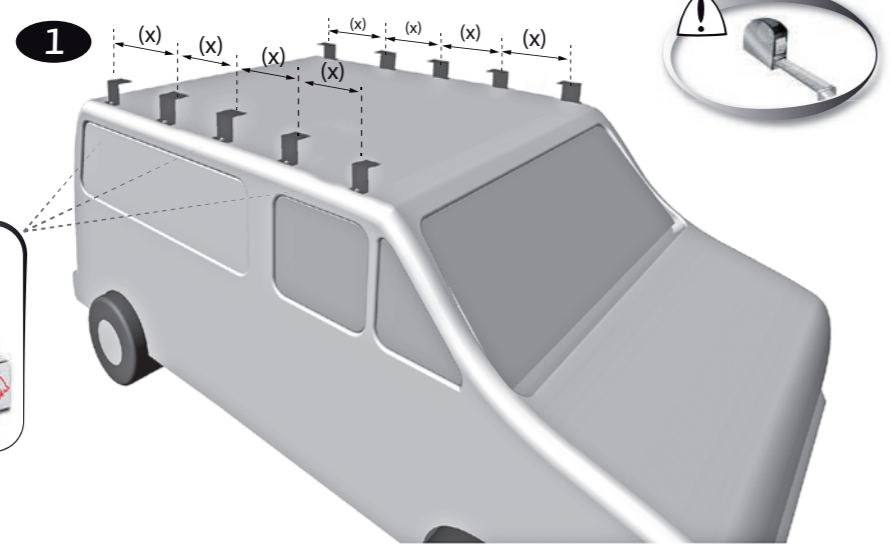


2

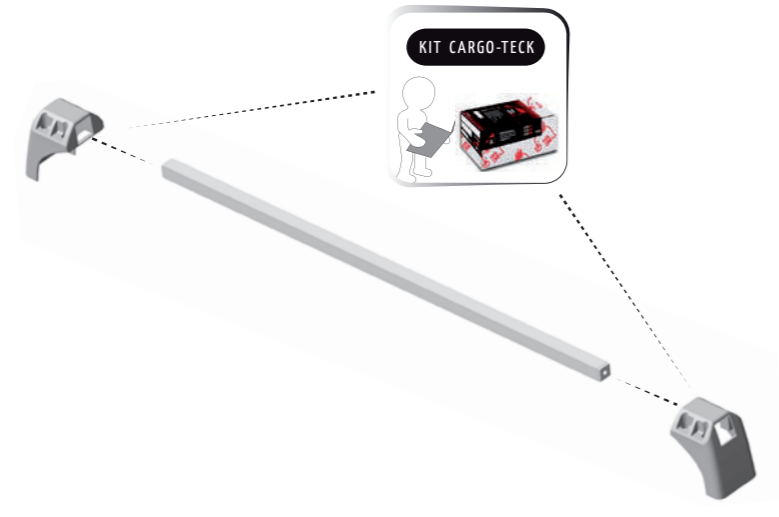


3

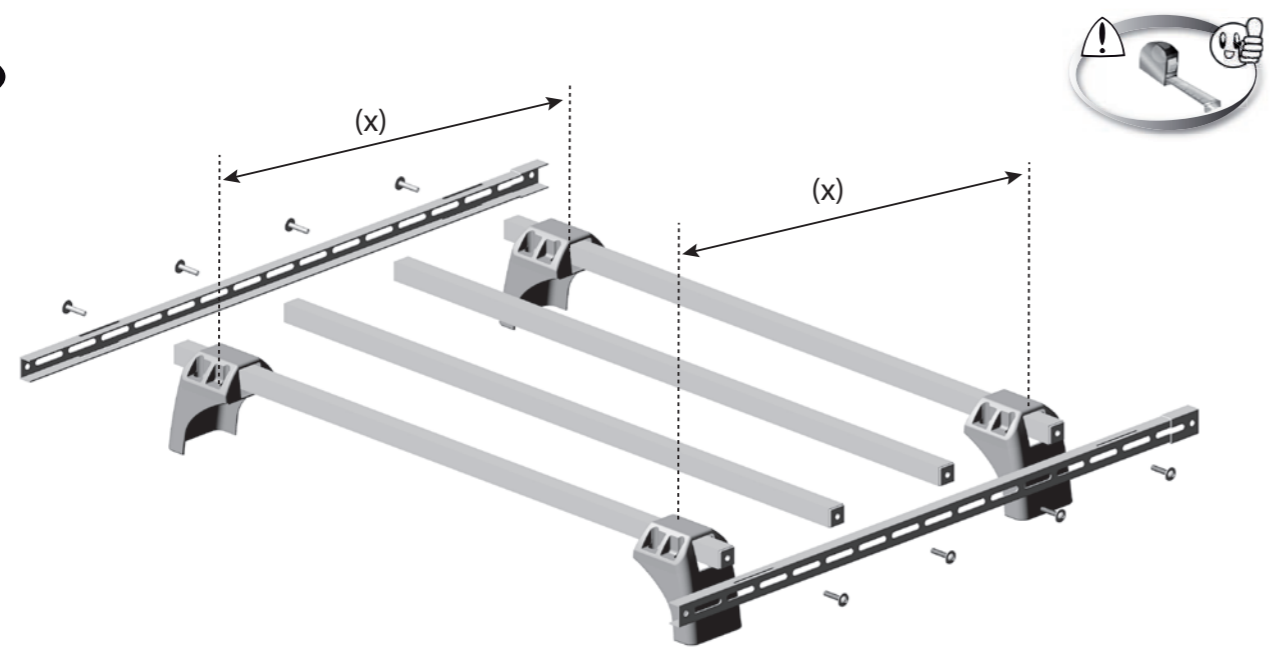


4

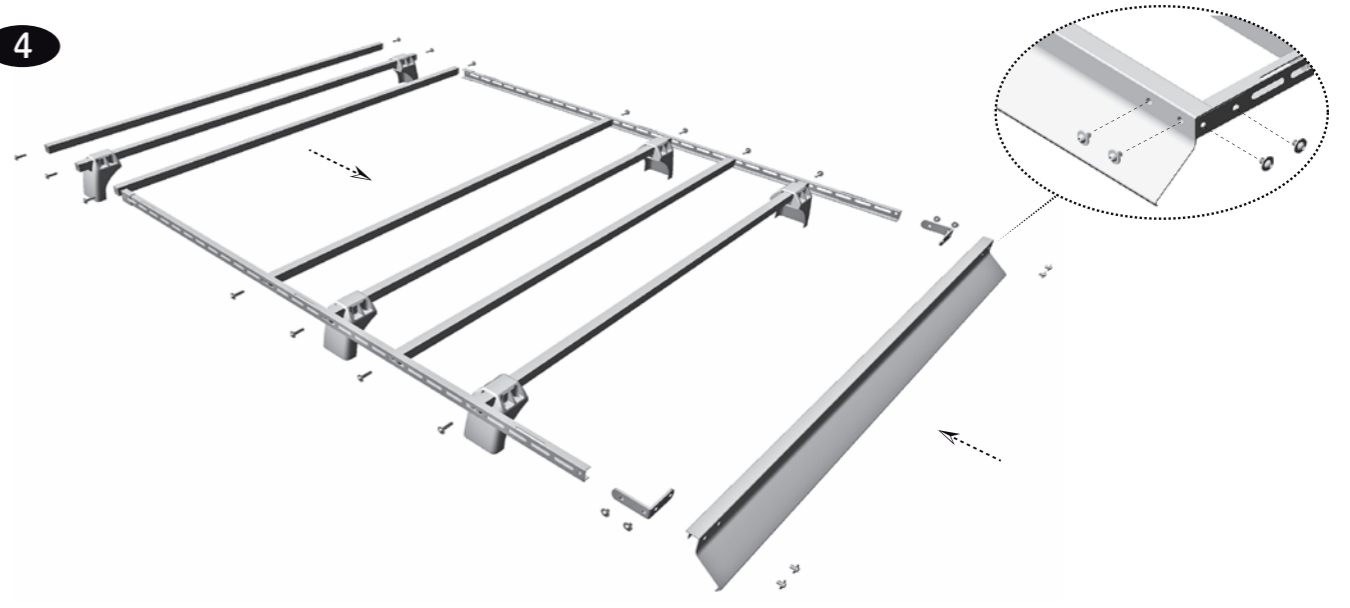


5

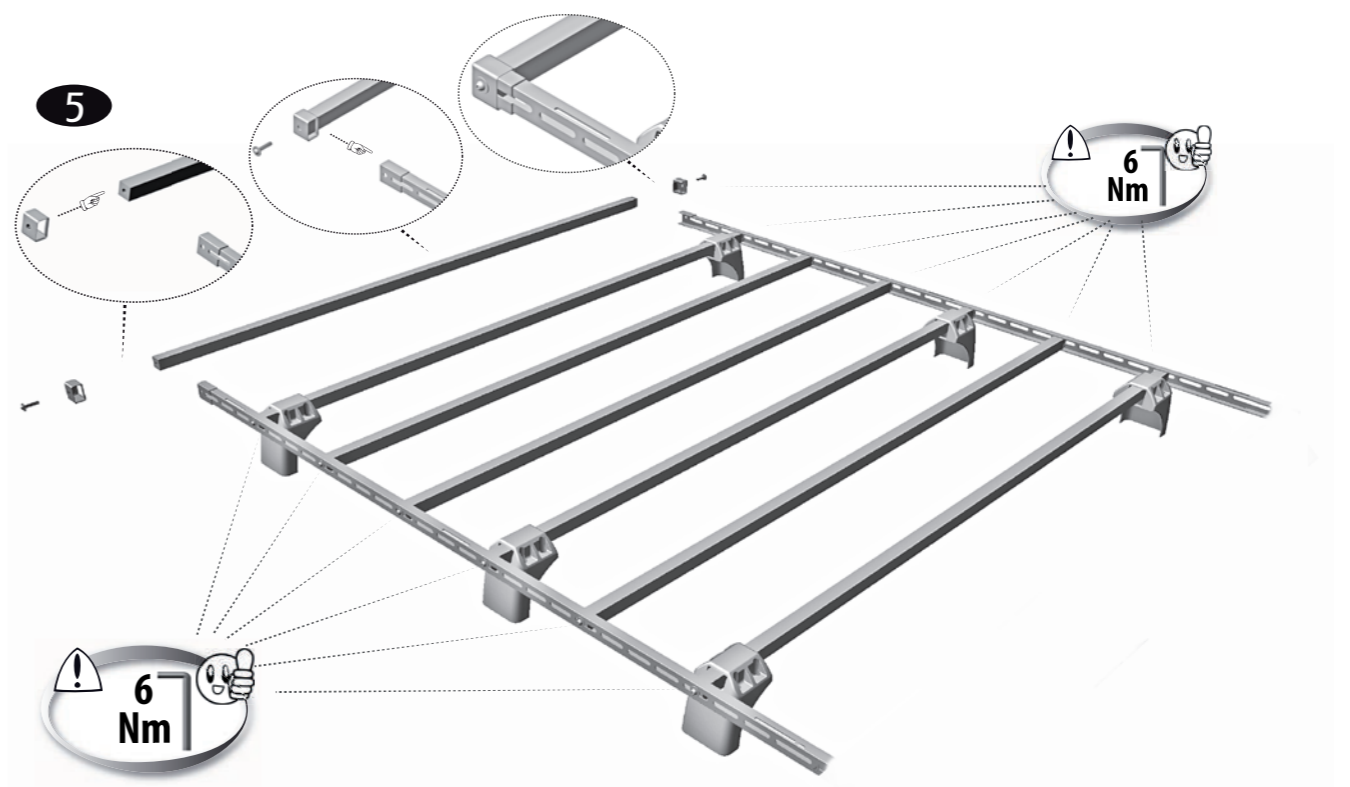

6

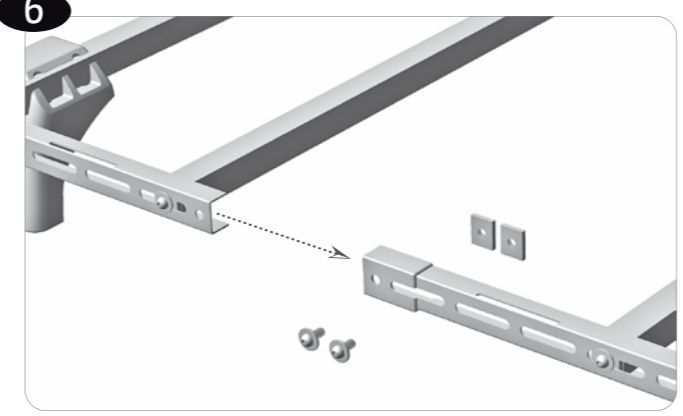


7

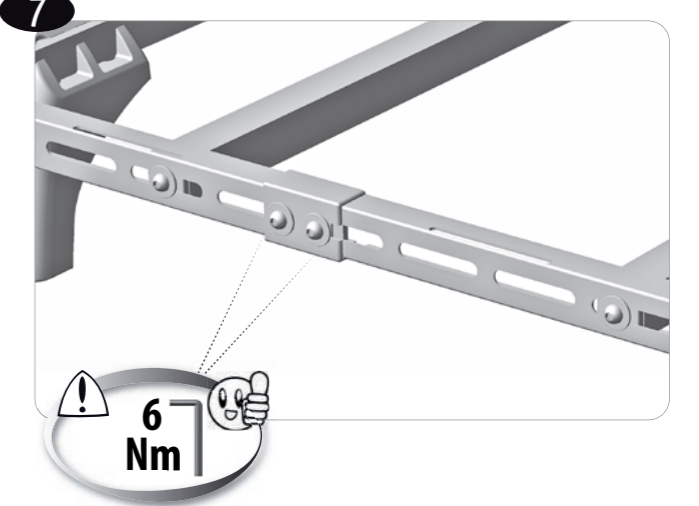




KIT CARGO-TECK

- CITOËN JUMPER I (1994- 2006)
- FIAT DUCATO II (1994 - 2006)
- PEUGEOT BOXER I (1994 - 2006)

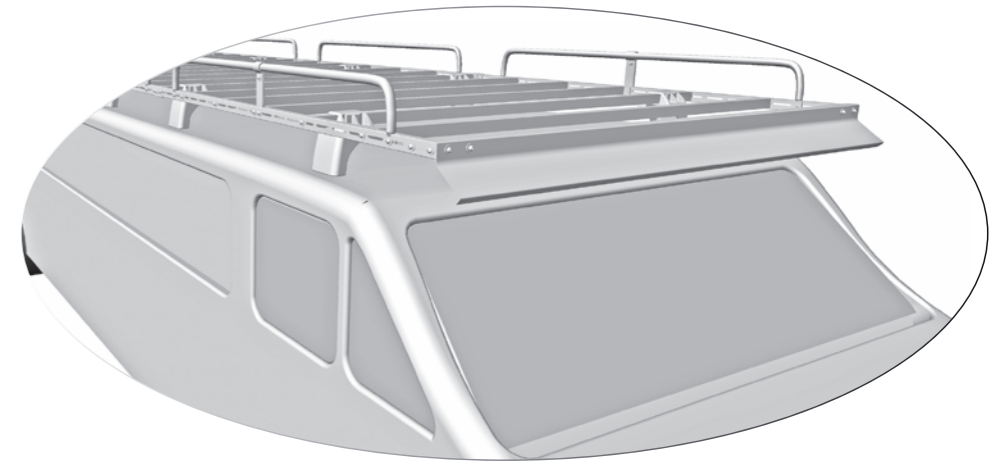



- NISSAN INTERSTAR (1997- 2010)
- OPEL MOVANO A (1997 - 2010)
- RENAULT MASTER II (1997 - 2010)

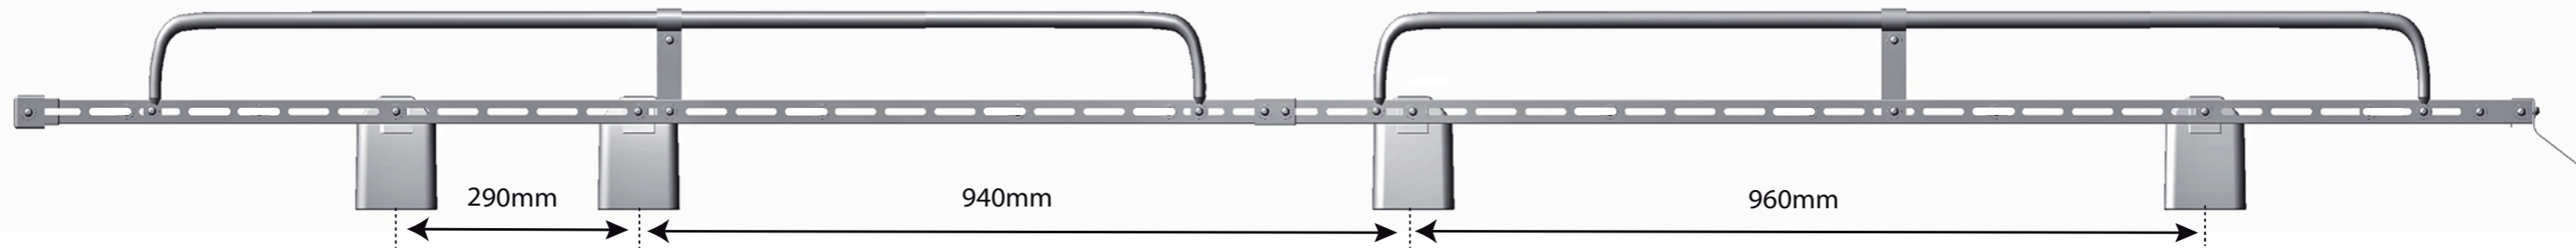





KIT CARGO-TECK

- NISSAN NV400 L2 H2 (2010->)
- OPEL MOVANO B L2 H2 (2010->)
- RENAULT MASTER III L2 H2 (2010->)

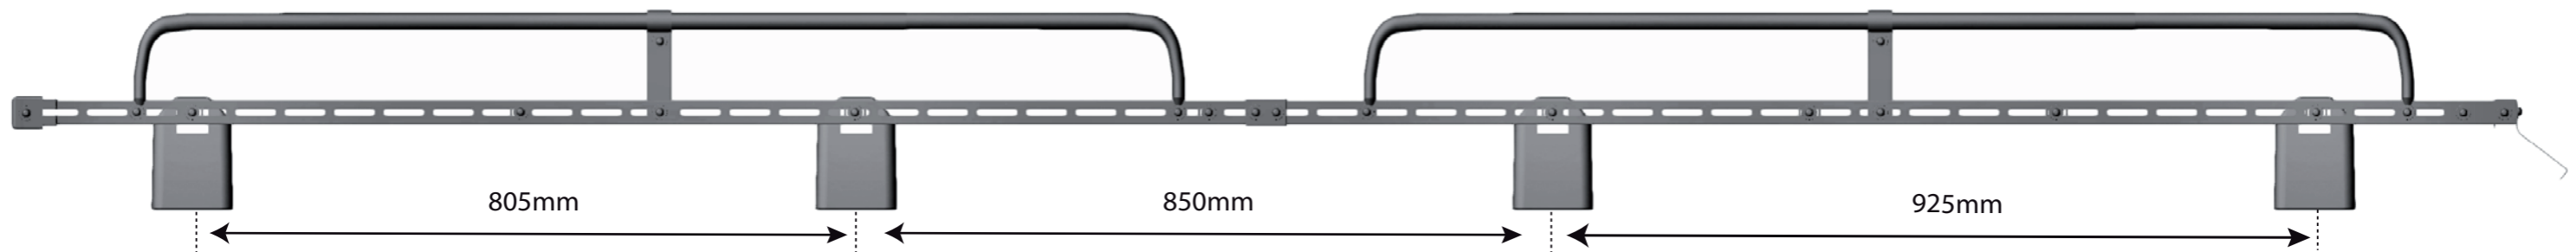
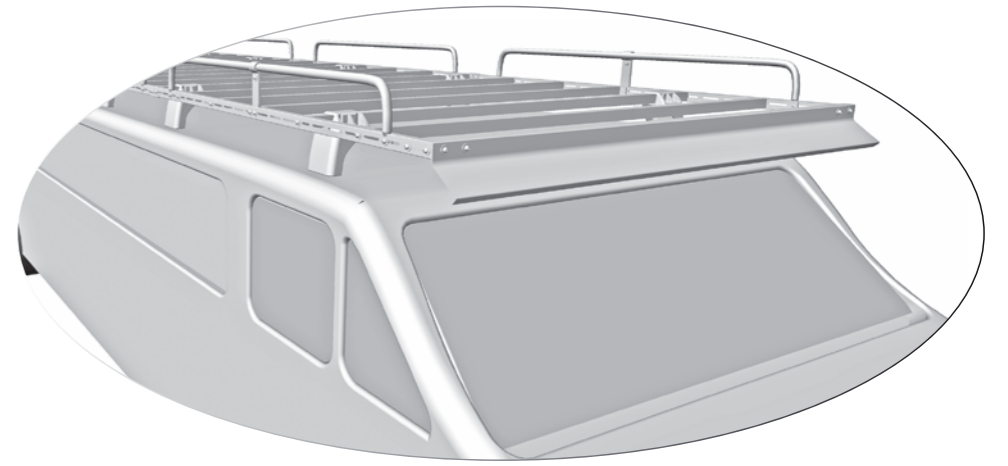








1

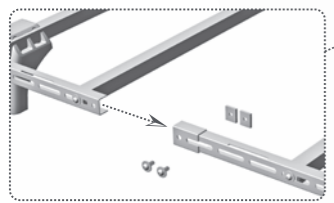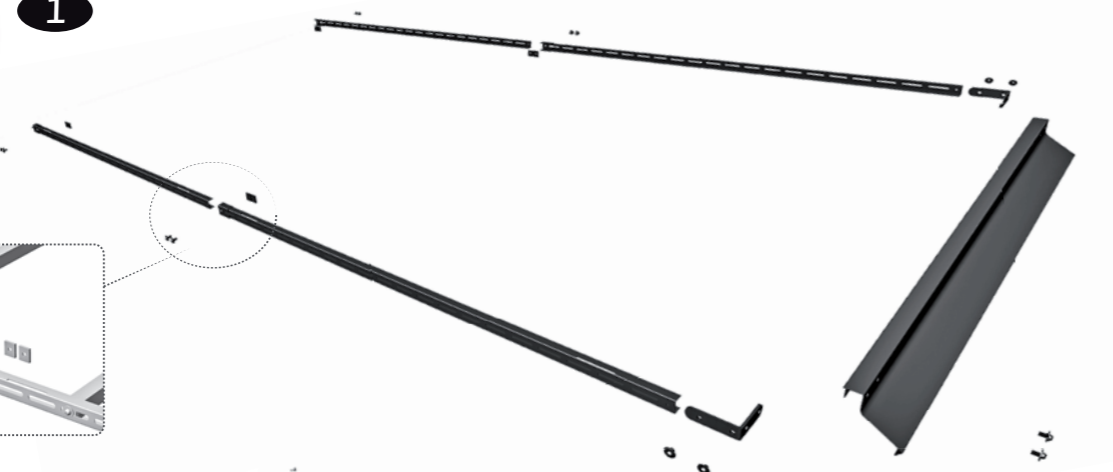





2

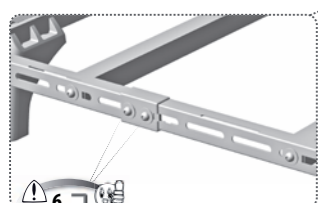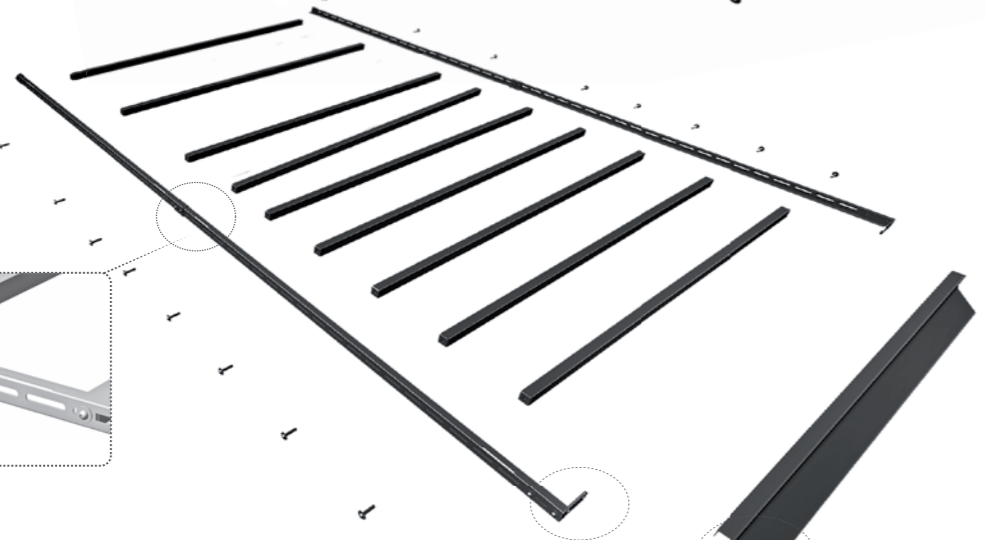


3

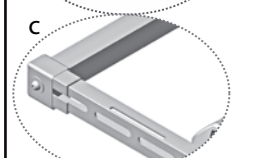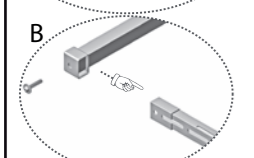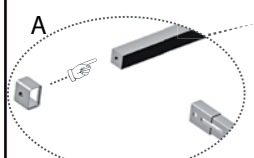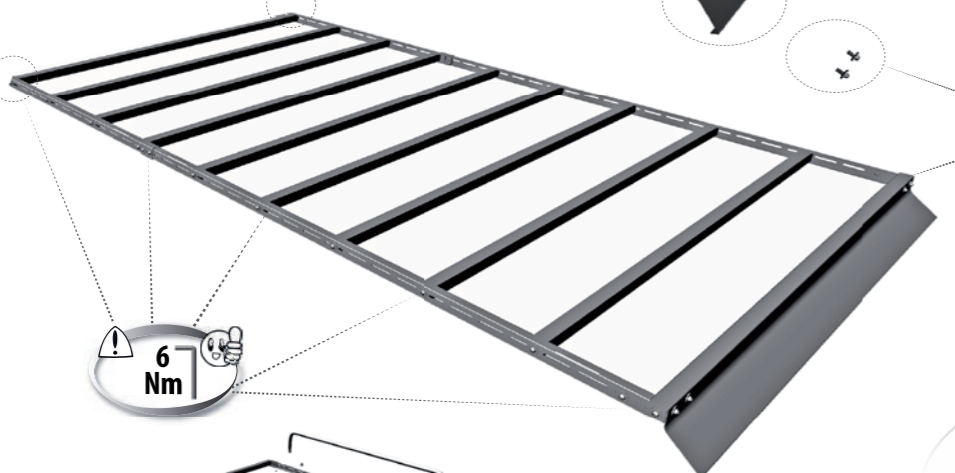



4

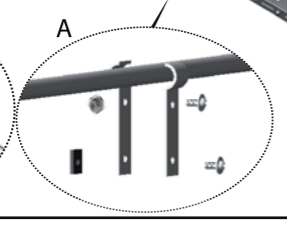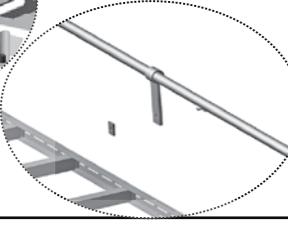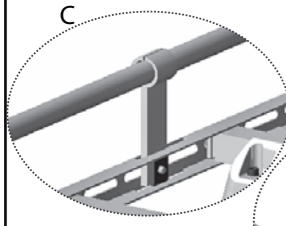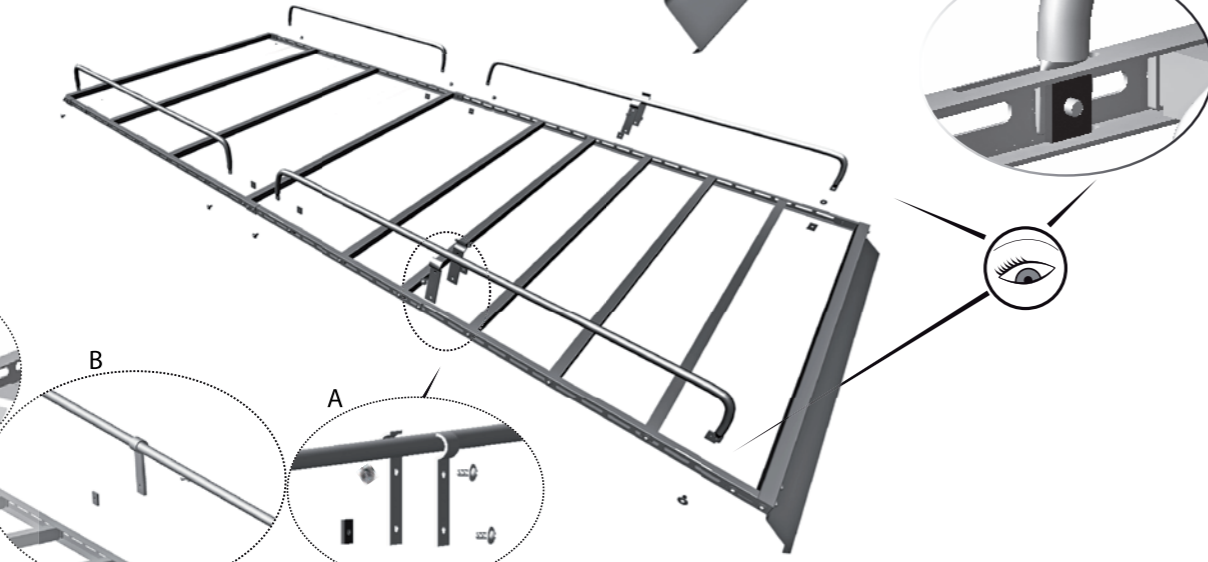


5

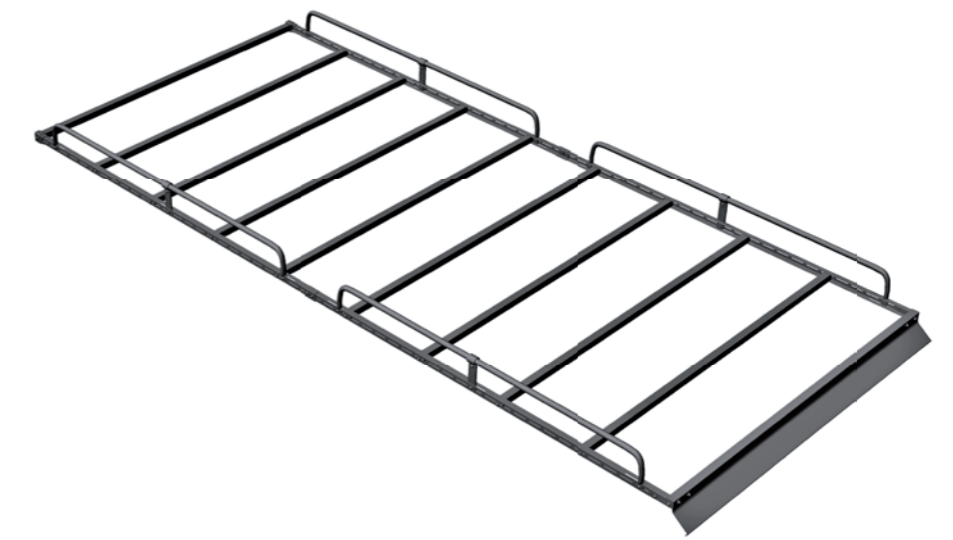

6

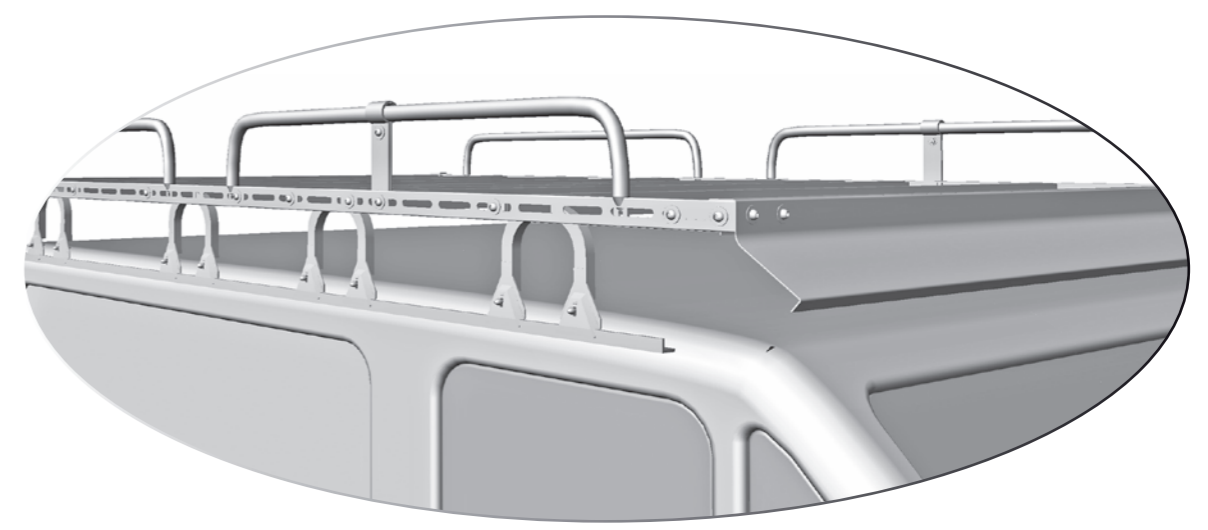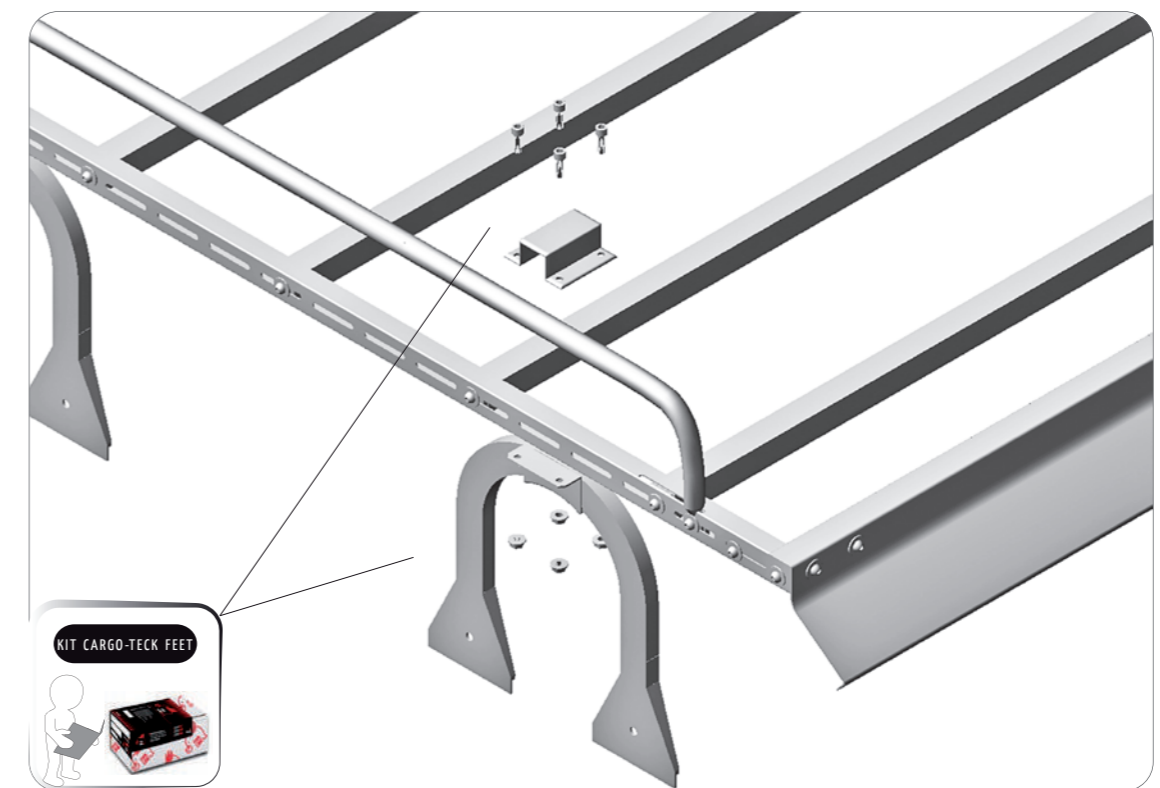

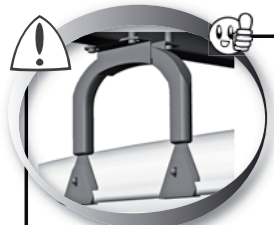

KIT CARGO-TECK FEET

- TOYOTA HIACE
- VOLKSWAGEN T3

