




	L*	H**	
FORD			
Transit IV	L4	H3	00-06
Transit V	L4	H3	07-14
MERCEDES			
209	L2	H1	
MB-100	L2	H1	
VOLKSWAGEN			
LT	L3	H2	96-06

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

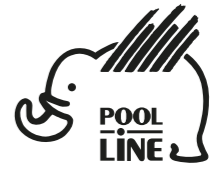

POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

200


KG.

MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042

123901

Rv: 01/2016

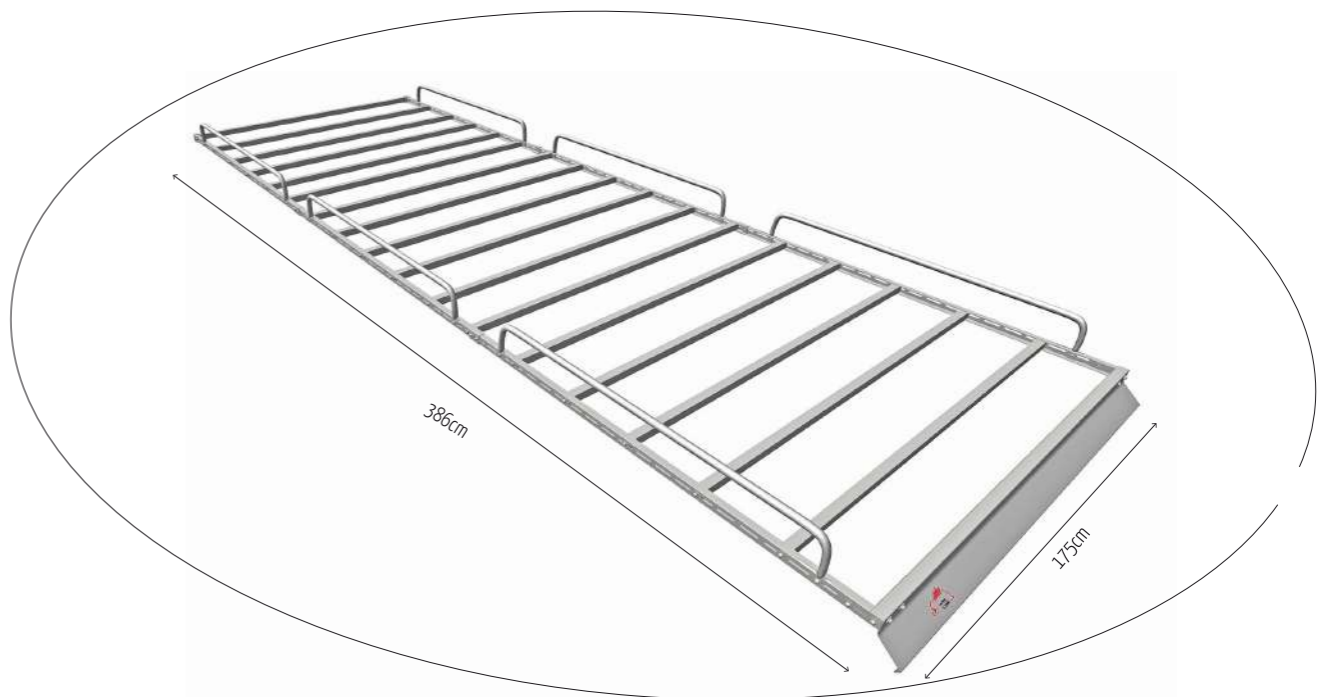

Rules

Traffic








→
→



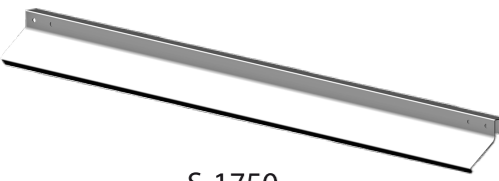


1

year

Warranty

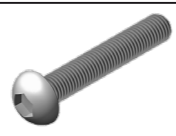

N		Q
1	 S-1750	1
2	 L-1300	6
3	 B-1022	6
4	 T-1735	17
5	 CHA-M8	34
6	 L-shaped bracket	2
7	 U-shaped bracket	2

N		Q
11	 L-shaped bracket	1
12	 CHA-M8	20
13	 ISO 7380 M8x40	34
14	 ISO 7380 M8x16	28
15	 DIN 125 Ø 8	62

