

FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK883
(1:1)

1.




FW020 (M8) x 4

| | |
|-------------|---|
| ACCESSESTEP | ✗ |
| IMPACT STEP | ✓ |

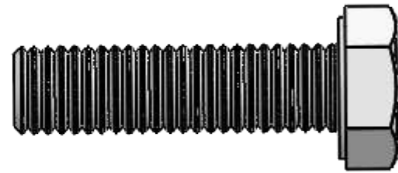


FB006 (M8 x 30) x 4

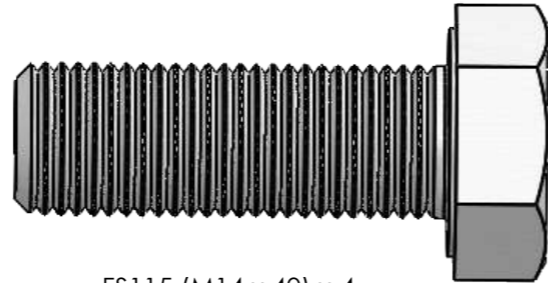


FS115 (M14 x 40) x 4




FN006 (M8) x 4

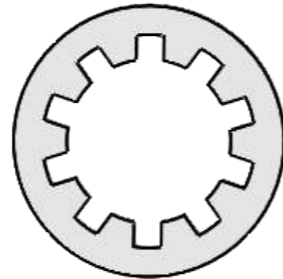

4010367-FW030 (M14) x 4

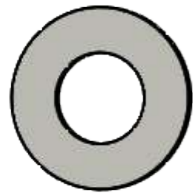



FW021 (M8) x 8

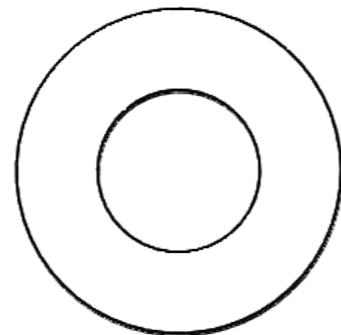


FW031 (M14) x 4

FITTING TIME: 20 Minutes

2.

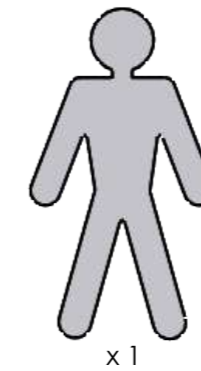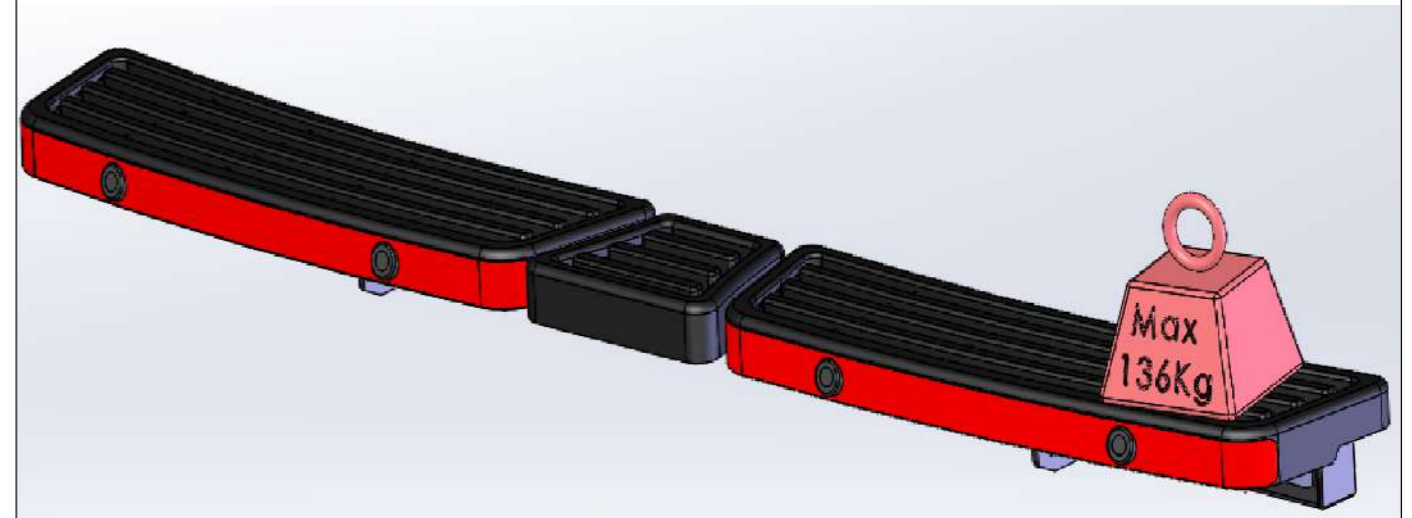

x 1

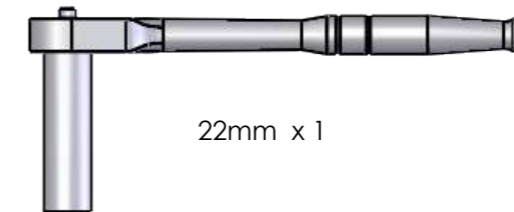

22mm x 1



13mm x 1



13mm x 1

FITTING INSTRUCTIONS

