

SSK005_

Sprinter Outrigger Fitting Kit

IMPACT STEP FITTING INSTRUCTIONS




IMPACT STEP FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK885
(1:1)



FW020 (M8) x 4

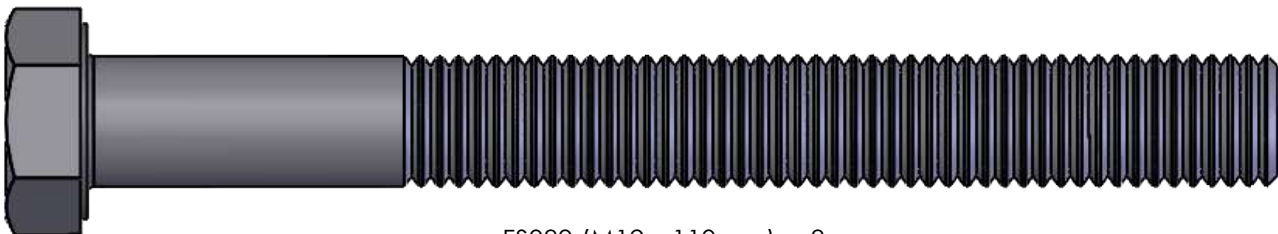

FS089 (M12 x 110mm) x 8

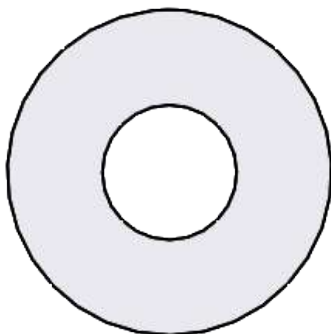


FW026 (M12) x 16



FN034 (M12) x 8



FB006 (M8 x 30mm) x 4

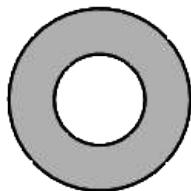

FW021 (M8) x




ACCESSSTEP	8
IMPACT STEP	4



FN006 (M8) x

ACCESSSTEP	✓
IMPACT STEP	✗

FITTING TIME: 40 Minutes

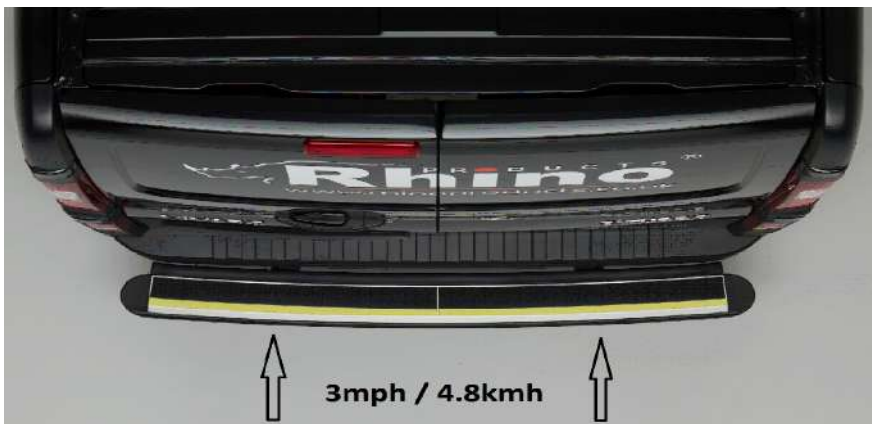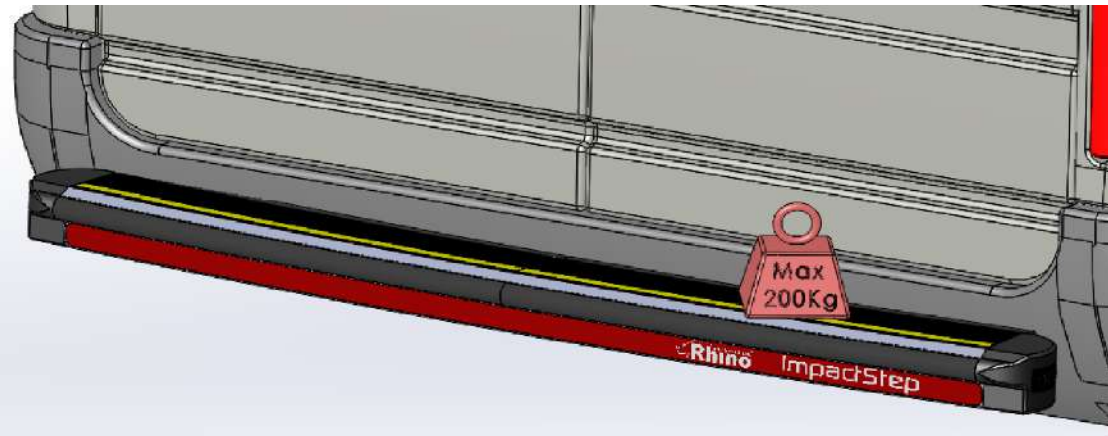

x 1




13mm x 1




19mm x 1



18mm x 1







19mm x 1



18mm x 1

IMPACT STEP FITTING INSTRUCTIONS

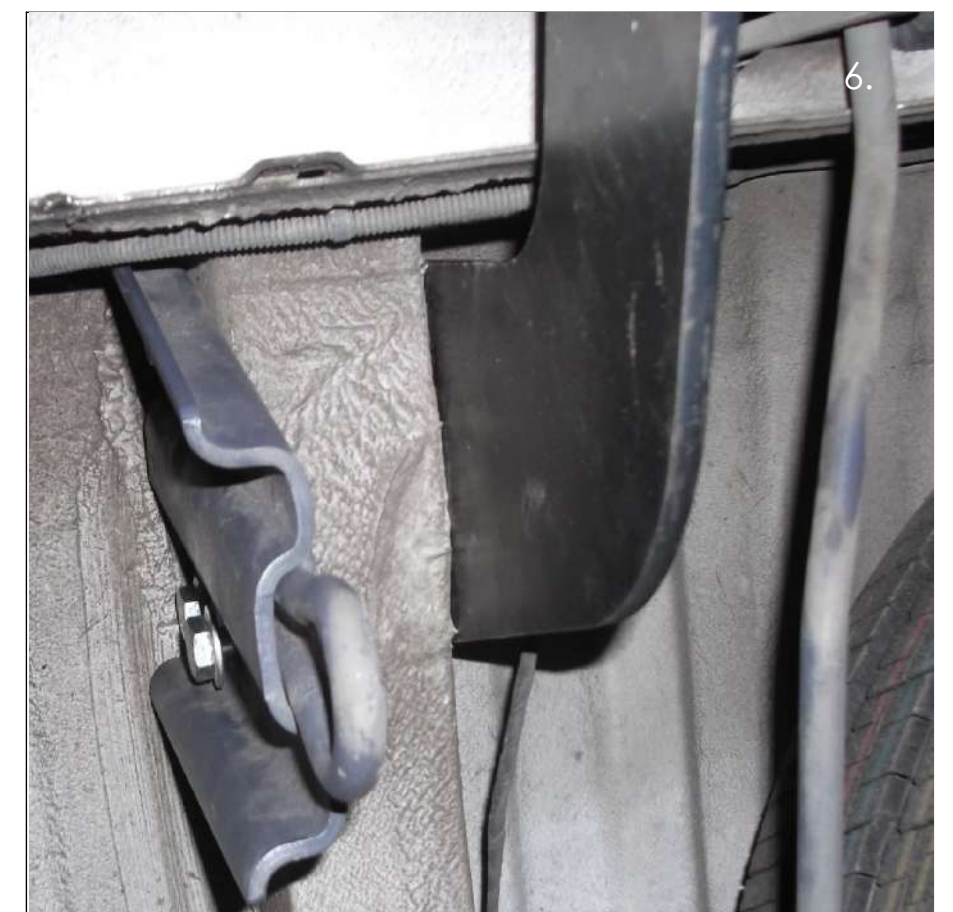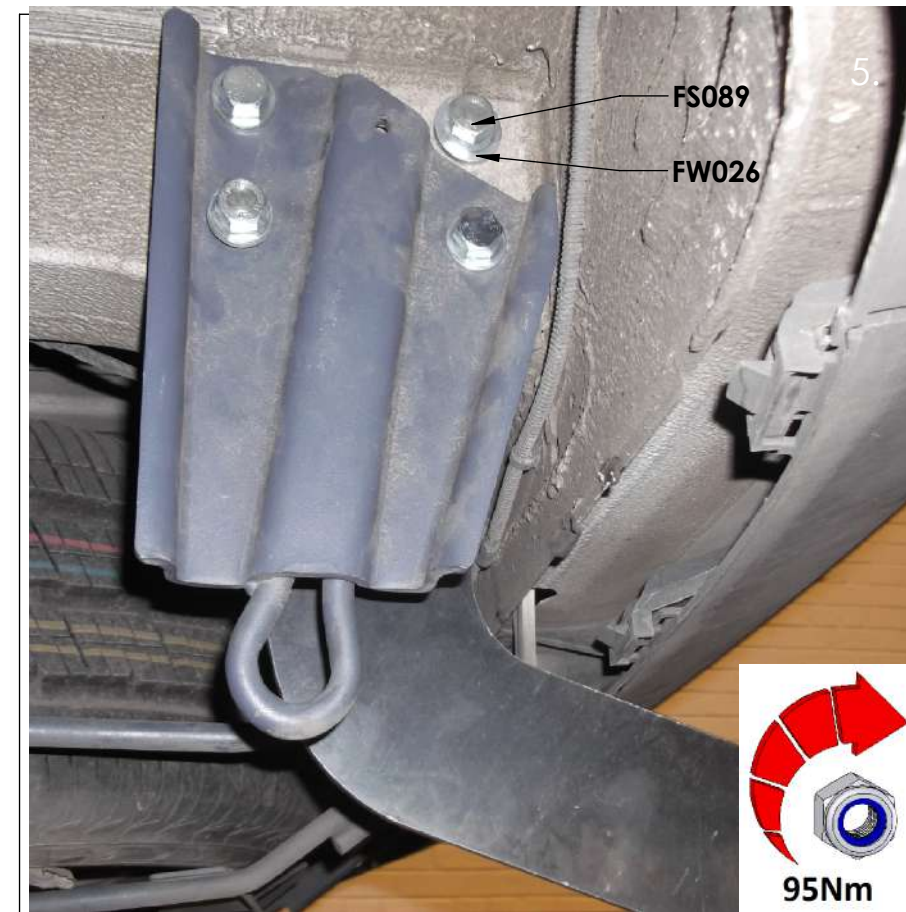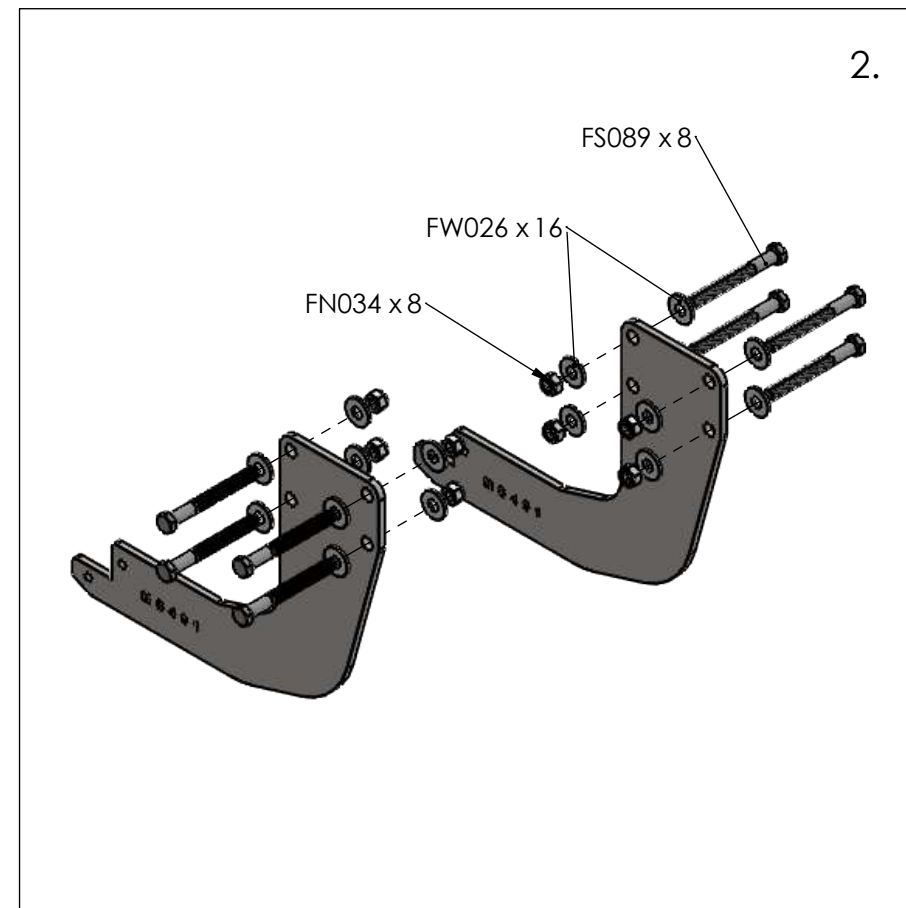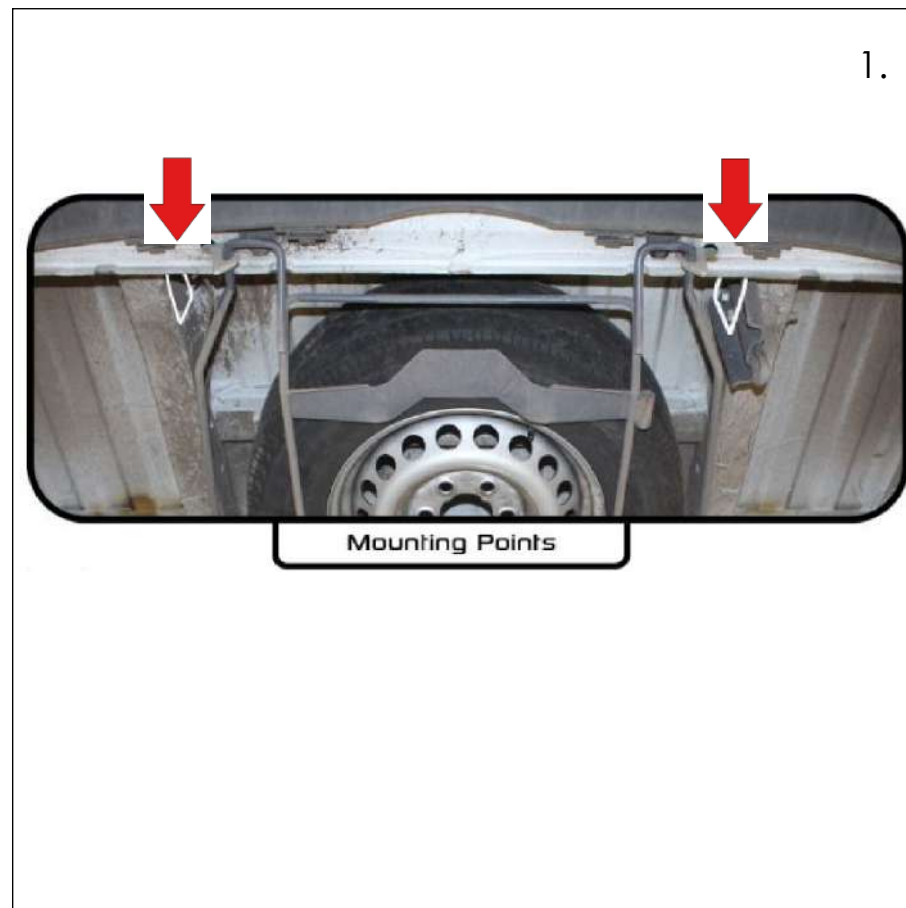

IMPACT STEP FITTING INSTRUCTIONS

