

N		Q		Q
1		2		4
2		2		4
3				8
4				2
5				1


N	BO0061	Q
8		24
9		24

N	BO0010 x 4	Q
10		8
11		8

N	BO0066 x 2	Q
12		4
13		4




Limpeza pre-instalación
Pre-installation cleaning

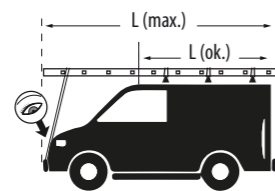

Revisar par de apriete
Check torque

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

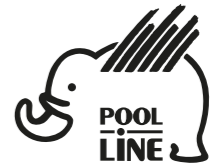



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

RECYCLABLE

121101

Rv: 09/2024

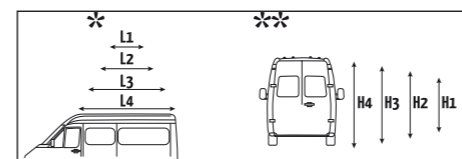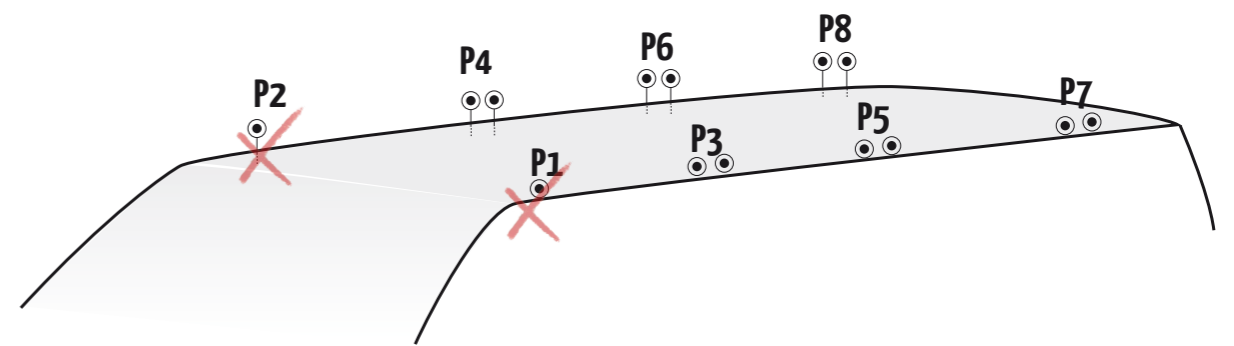

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
FORD												
Transit Custom II	L1	H1	2023 ->	BO0010 / B00066	✗	✗	220+G20+1B	220+G20+1B	220+G2+1B	220+G2+1B	220+G2+1C	220+G2+1C
Transit Custom II	L2	H1	2023 ->	BO0010 / B00066	✗	✗	220+G20+1B	220+G20+1B	220+G2+1B	220+G2+1B	220+G2+1C	220+G2+1C

