


FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK887
(1:1)

FITTING TIME: 30 Minutes

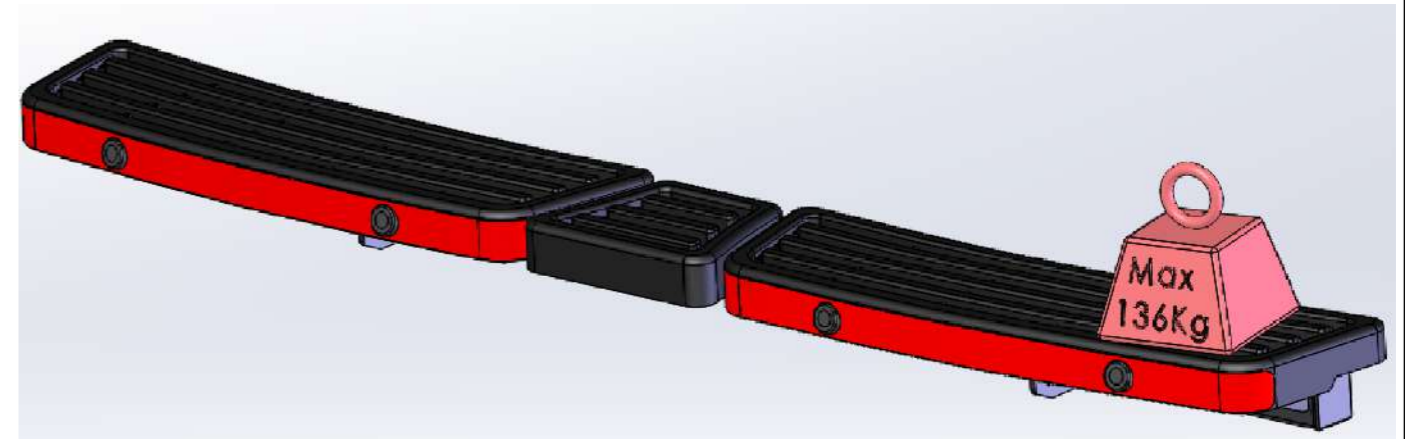

FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓

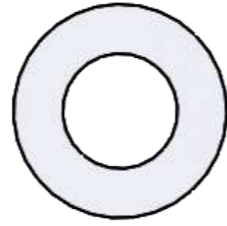

FW006 (M10) x 6




FB006 (M8 x 30) x 4

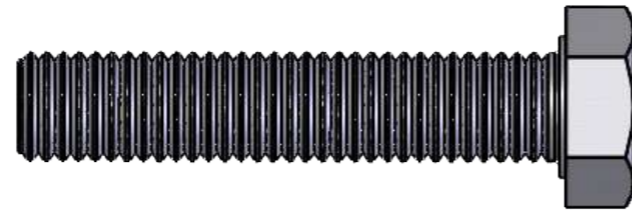


FS097 (M10 x 50) x 2



FN006 (M8) x 4

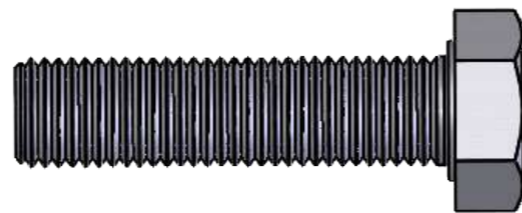


FS096 (M10 x 40) x 2

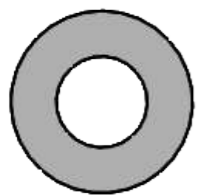


FW021 (M8) x 8





FN008 (M10) x 2

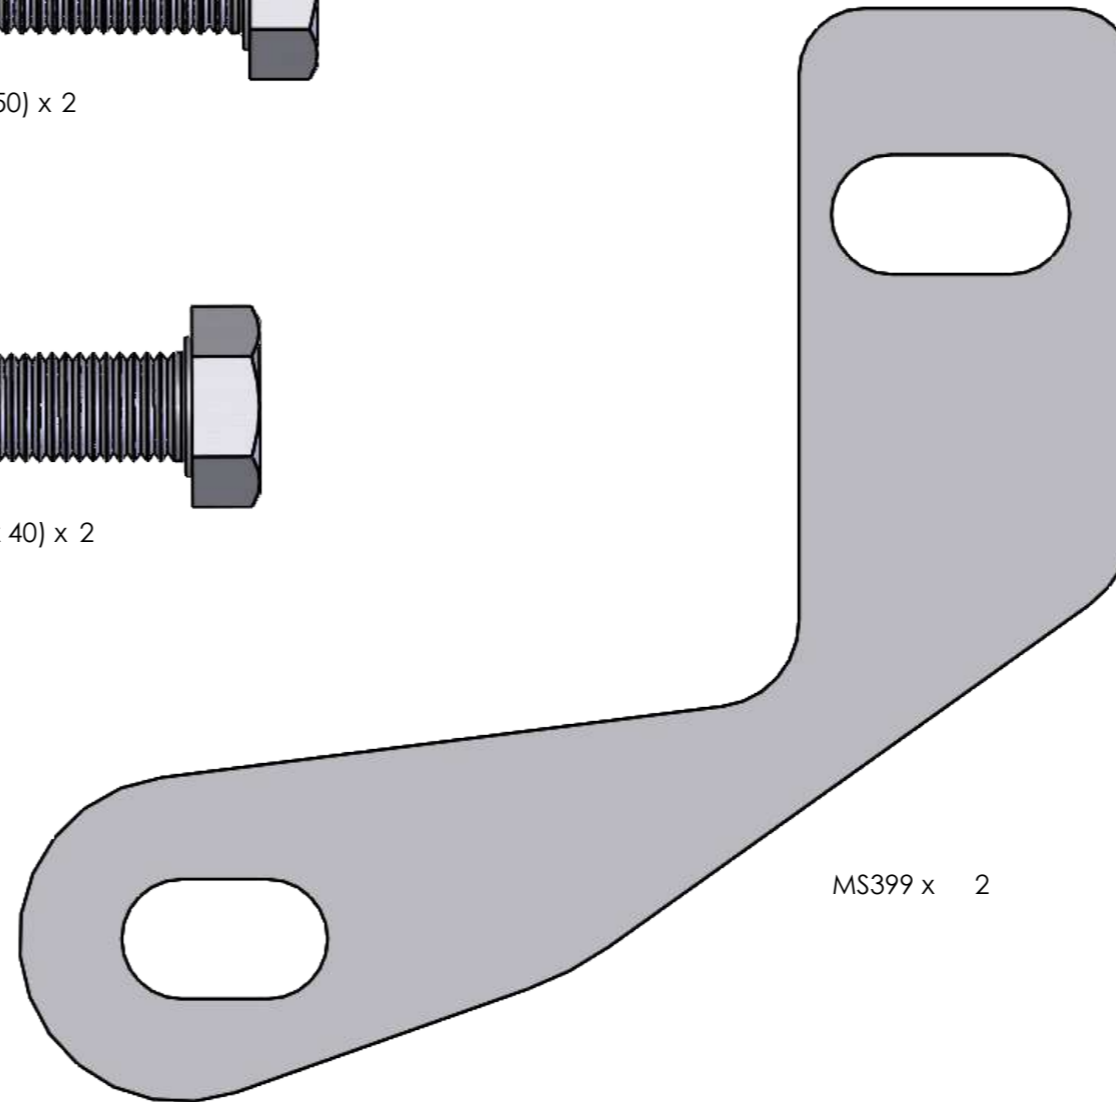

MS399 x 2

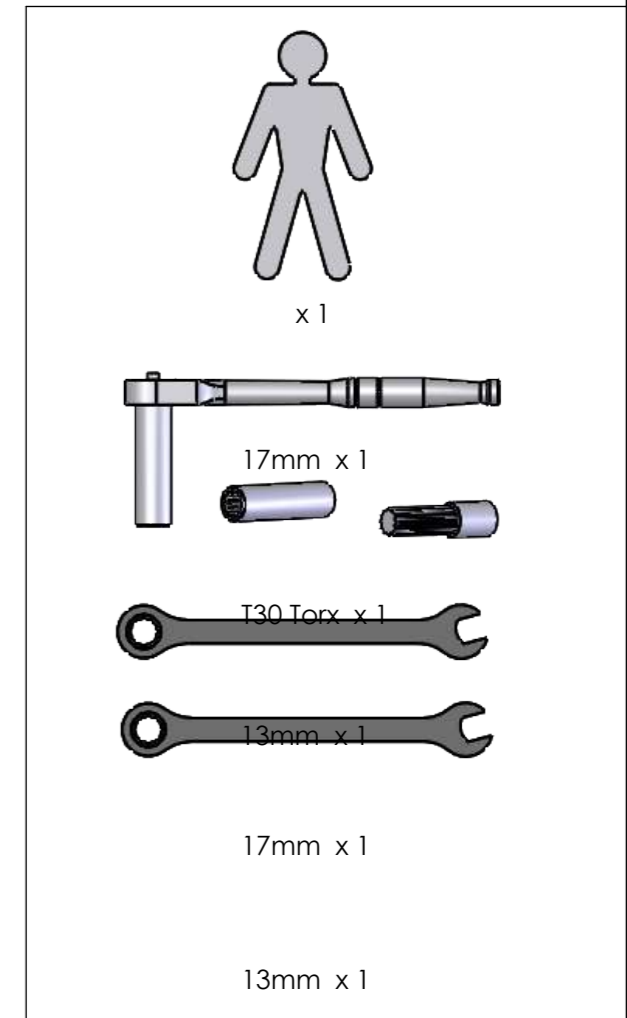

FITTING INSTRUCTIONS

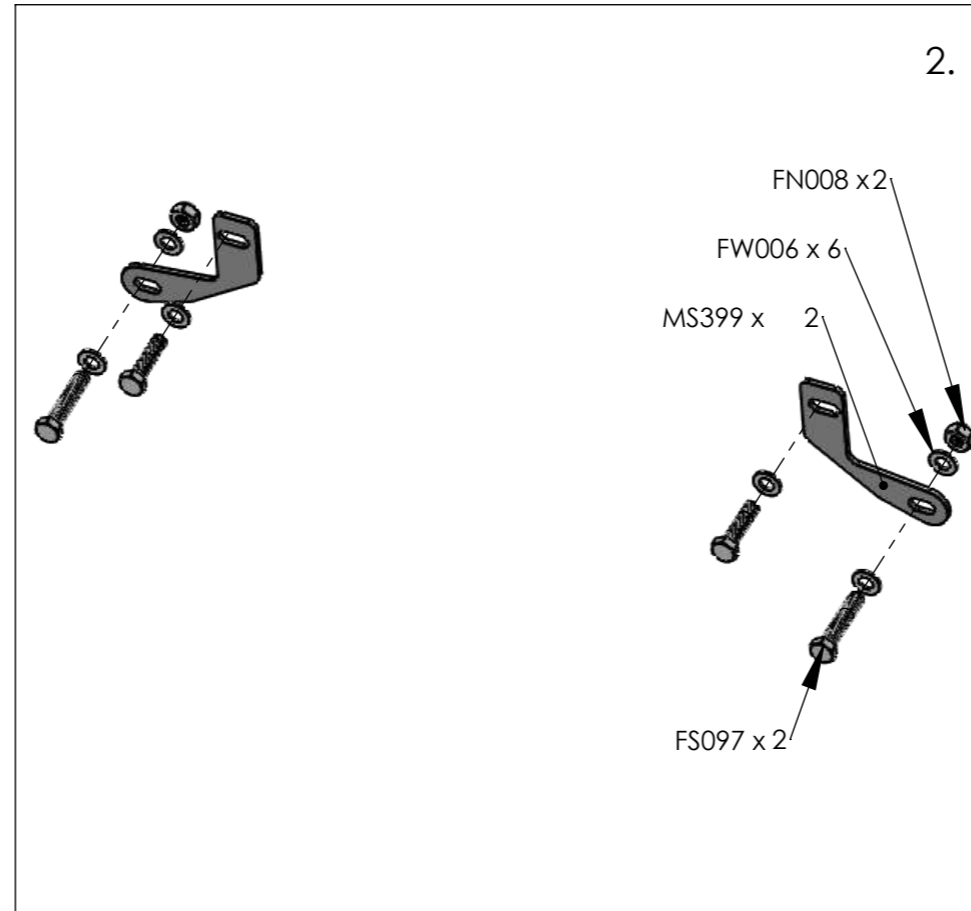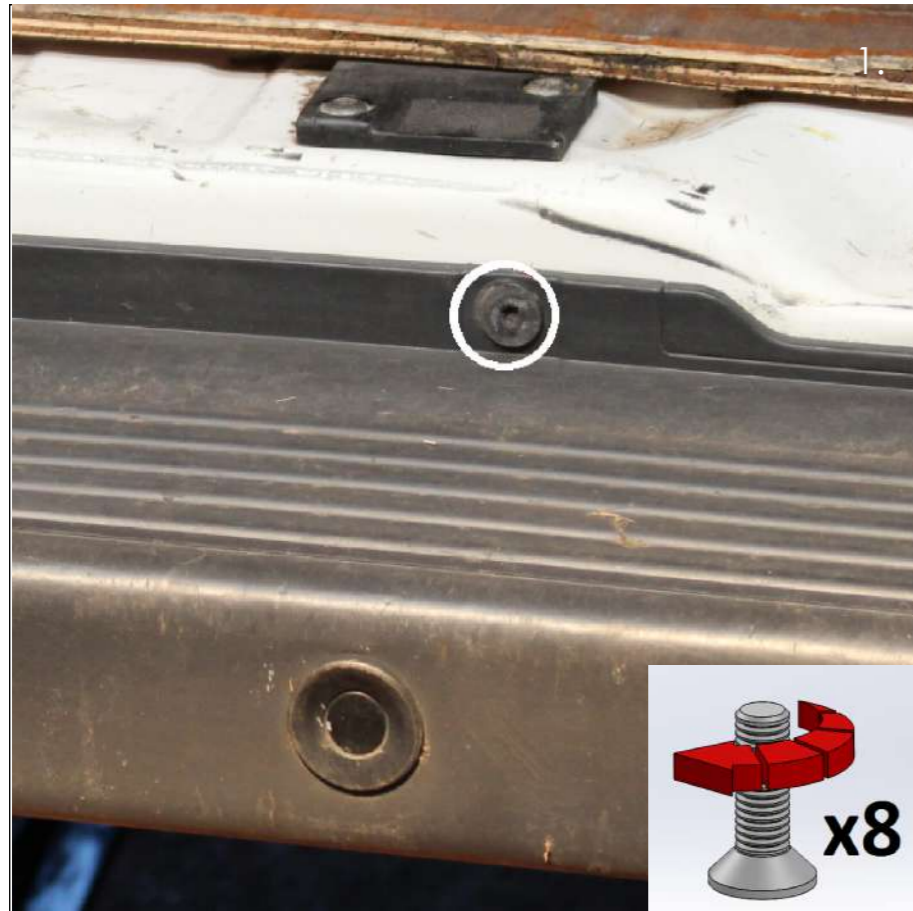

FITTING INSTRUCTIONS

