


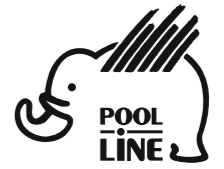

- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj













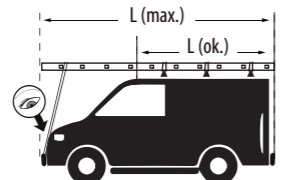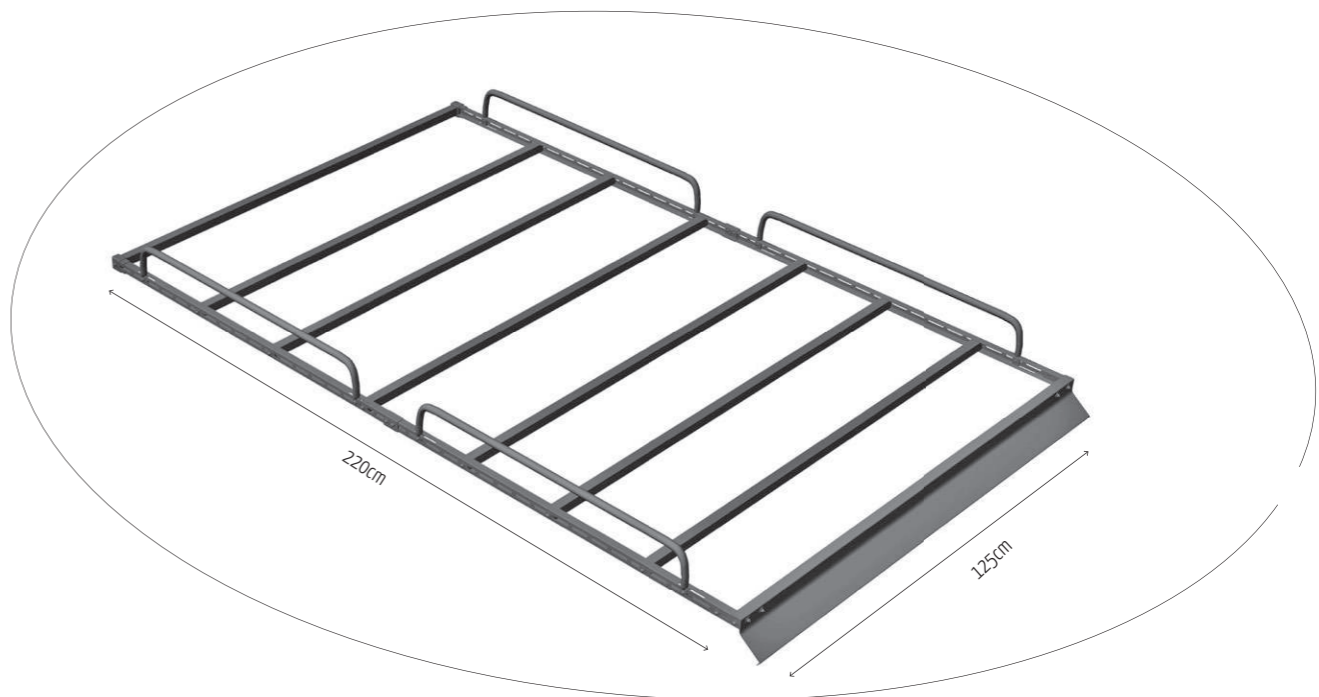



POOL-LINE ACCESORIOS, S.L.  
 C. Esqueis, 19. P. I. Can Barri  
 08415- Bigues i Riells. Barcelona (España)  
 www.pool-line.net


<span style="font-size: 2em; font-weight: bold; margin-left: 20px;">200</span> <span style="font-size: 1.5em; font-weight: bold; margin-left: 10px;">KG.</span> <span style="font-size: 0.8em; font-weight: bold; margin-left: 10px;">MAX.</span>
Nº HOMOLOGACIÓN: <span style="border: 1px solid black; border-radius: 50%; padding: 2px 5px;">E9</span> 26R-03.1042
<span style="font-size: 0.8em; font-weight: bold; margin-left: 10px;">RECICLABLE</span>


123412


Rv: 06/2023



N		Q
20	 S-1250	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1235	7
25		14
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x40	14
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	34


N		Q
32		1

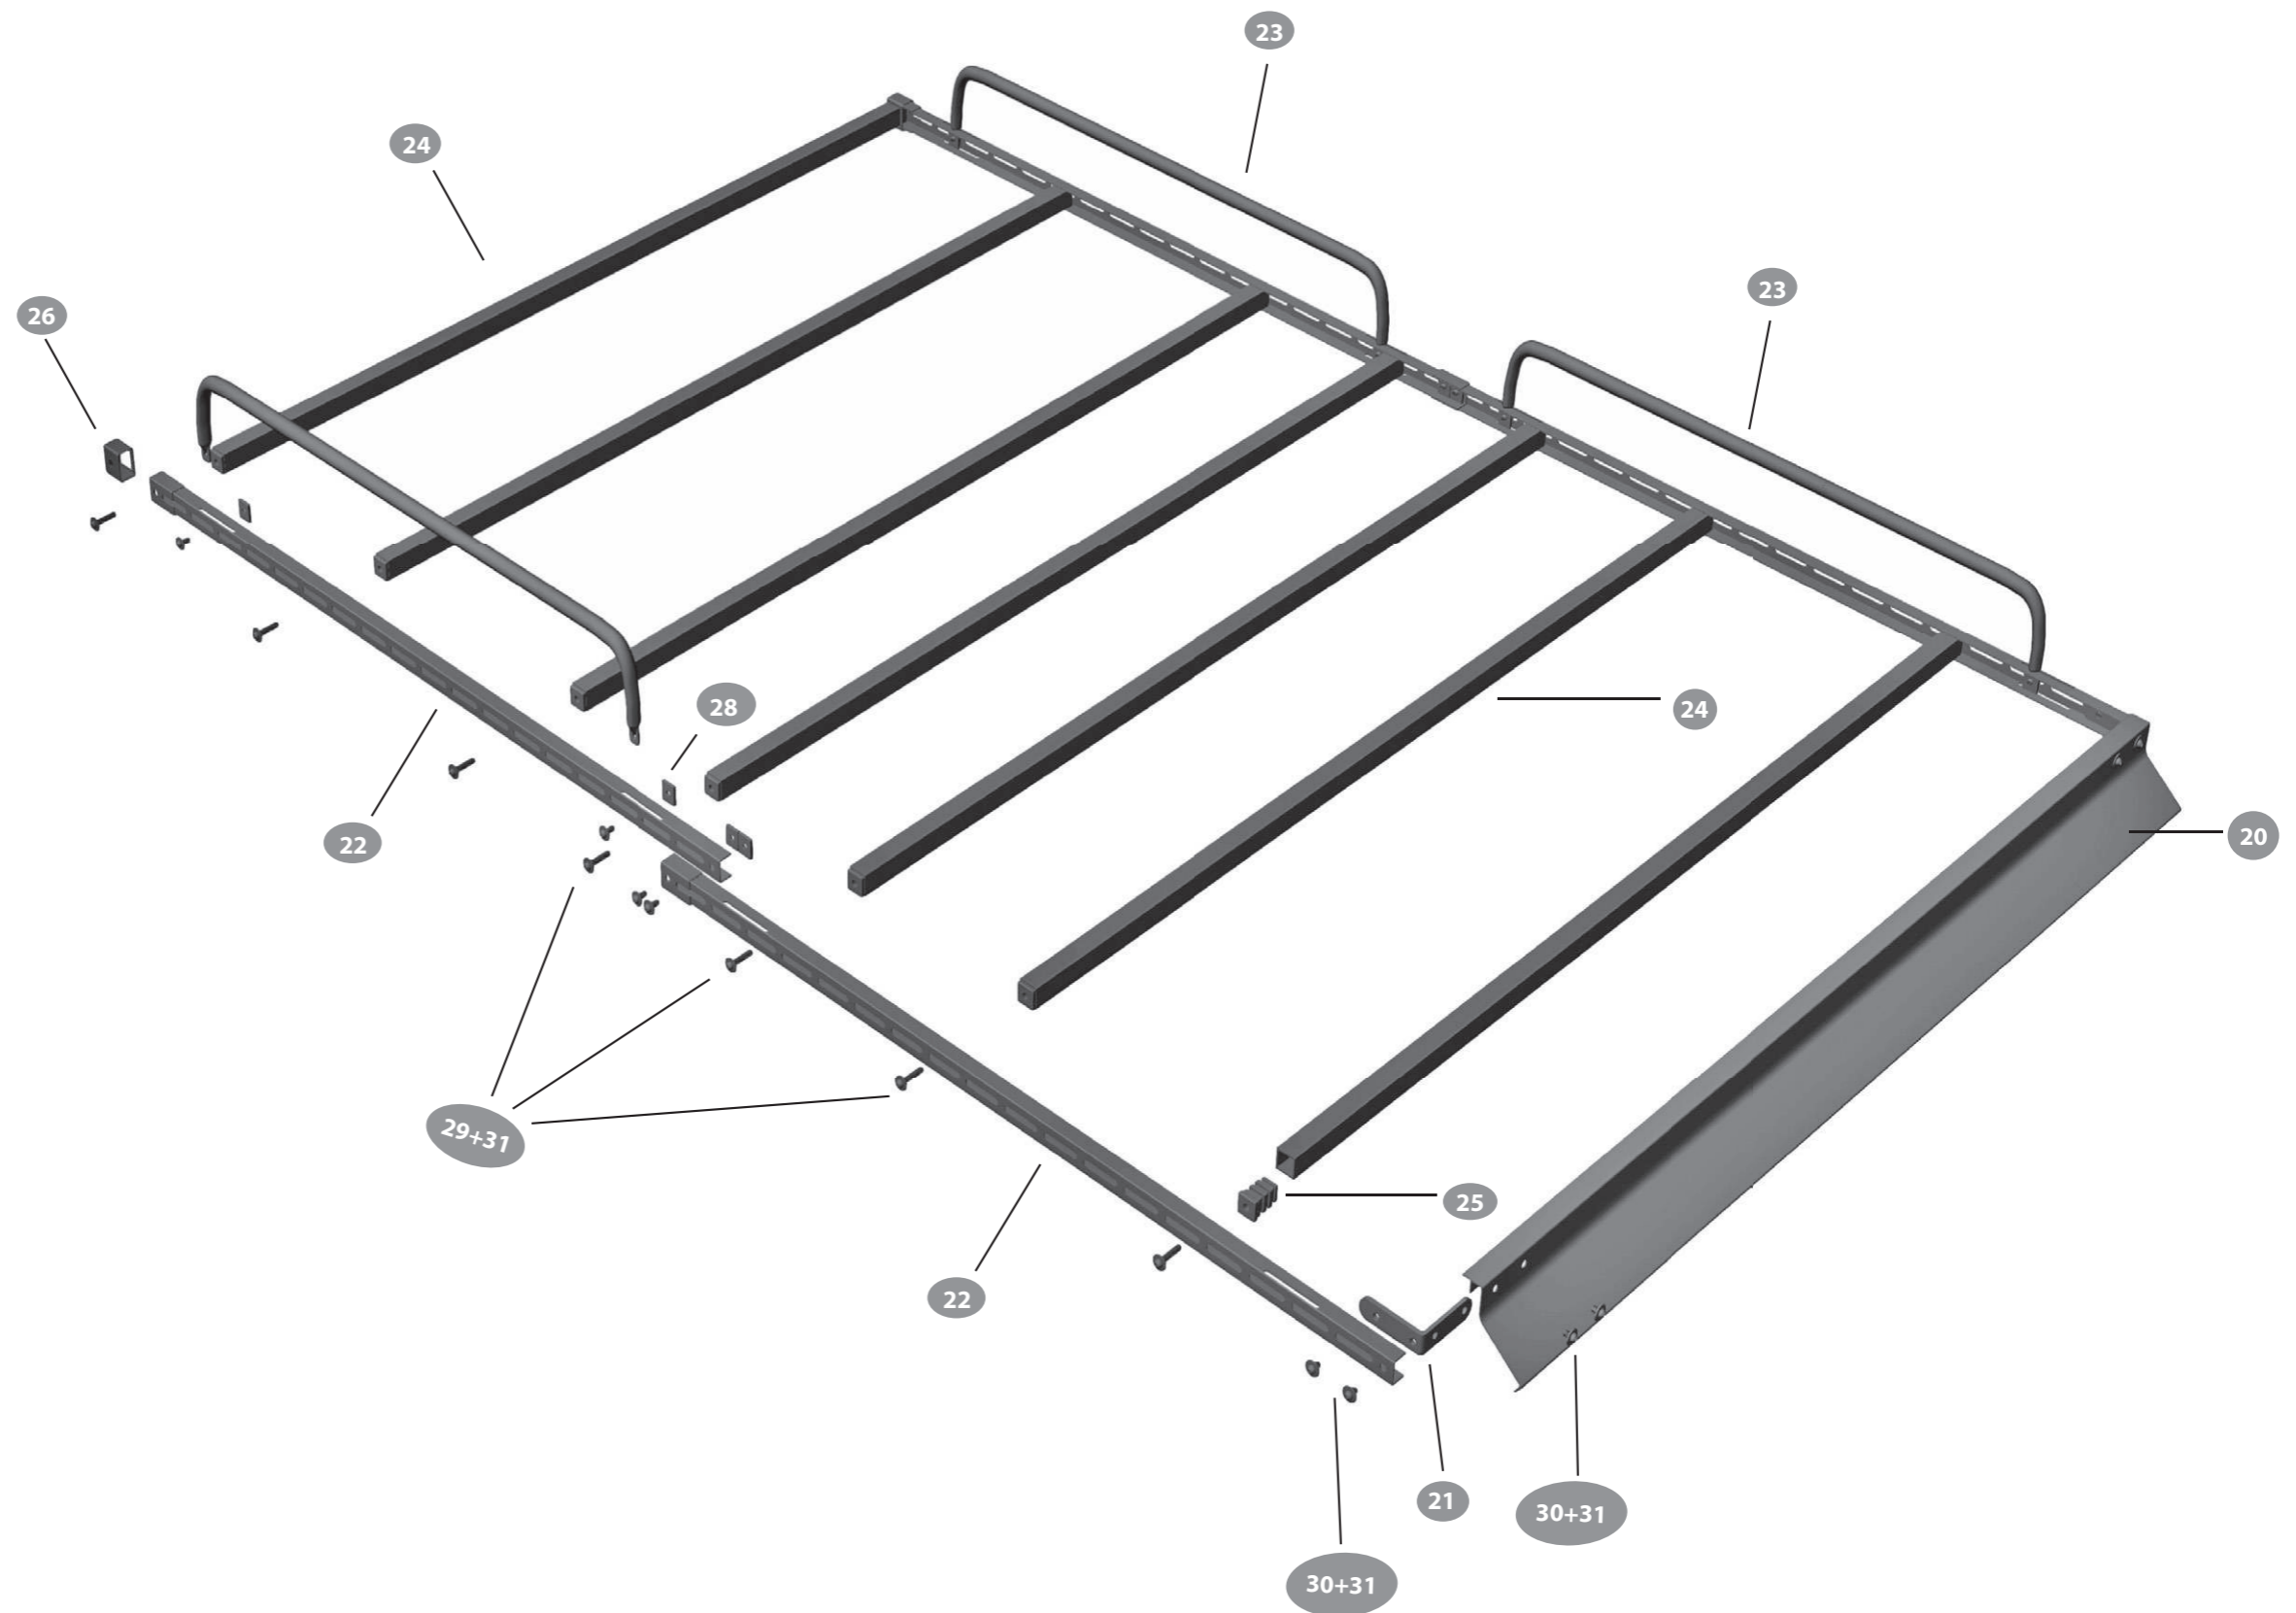

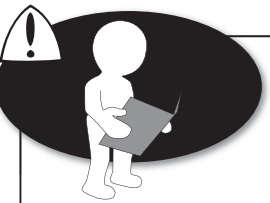


**CITROËN C15**


Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone

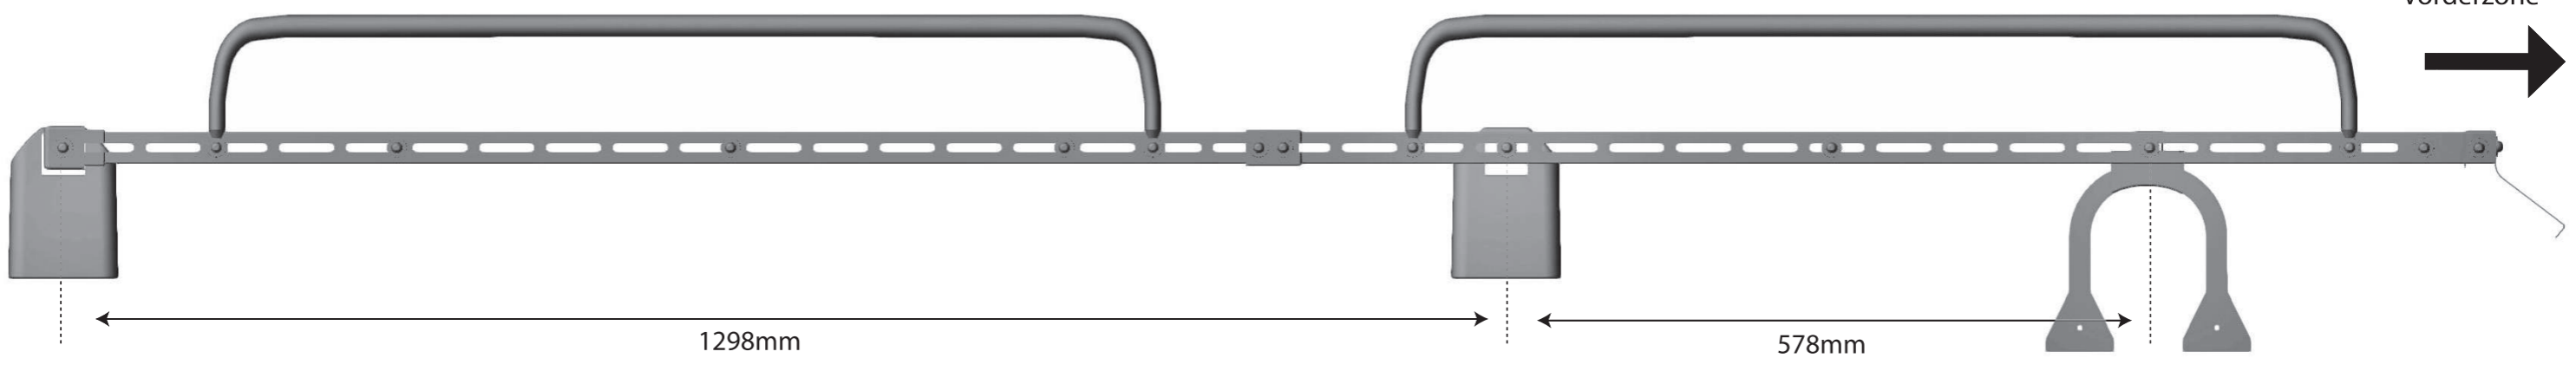


**FORD CONECT I TOURNEO / TRANSIT L2 (04-13)**

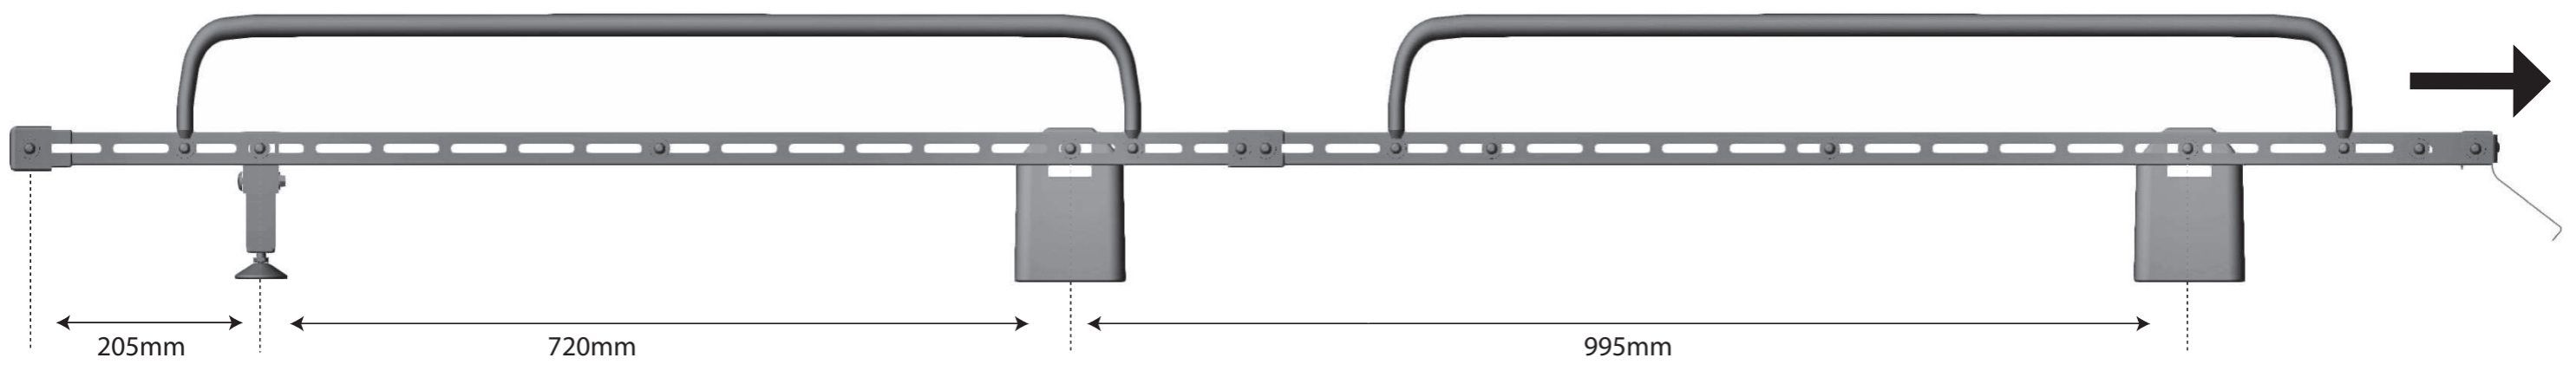


**FORD CONECT II TOURNEO / TRANSIT L2 (13-)**

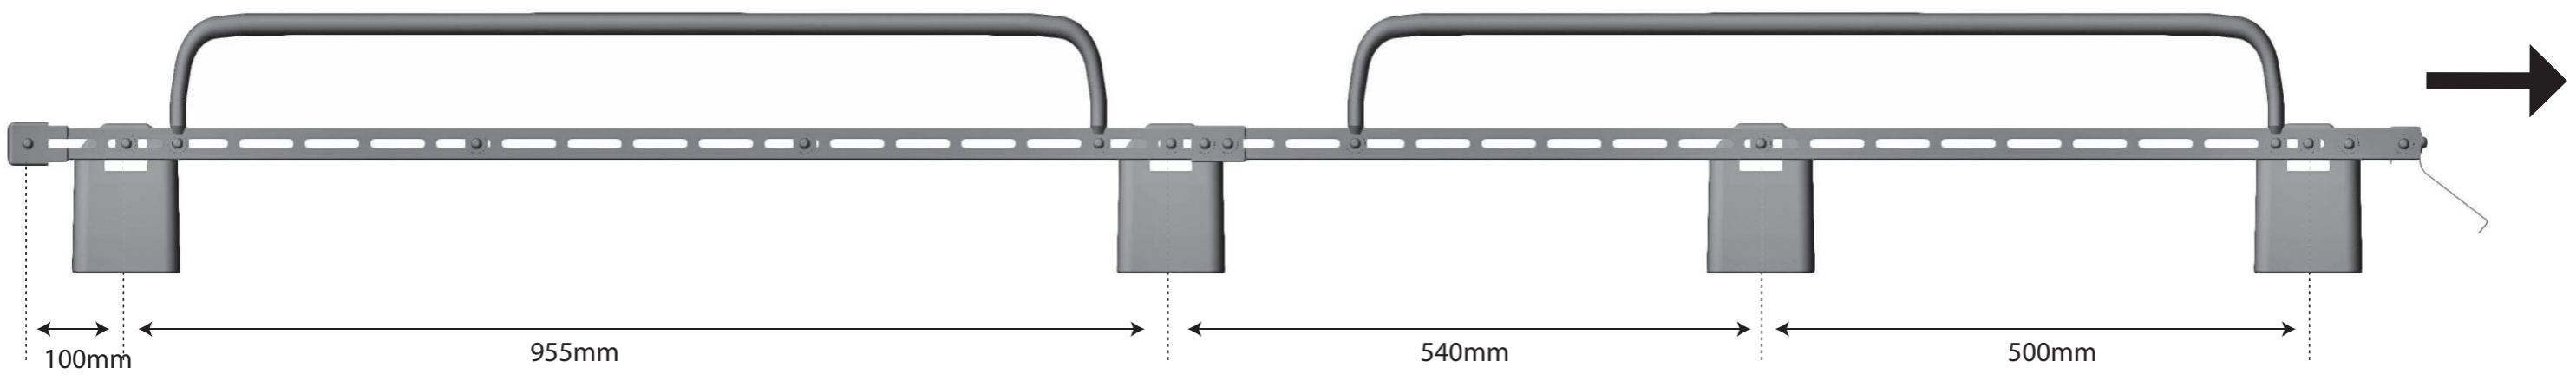

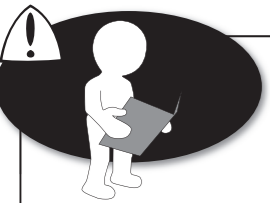


**MERCEDES CITAN L3 / NISSAN NV250 L2 / RENAULT KANGOO II L3**


Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone

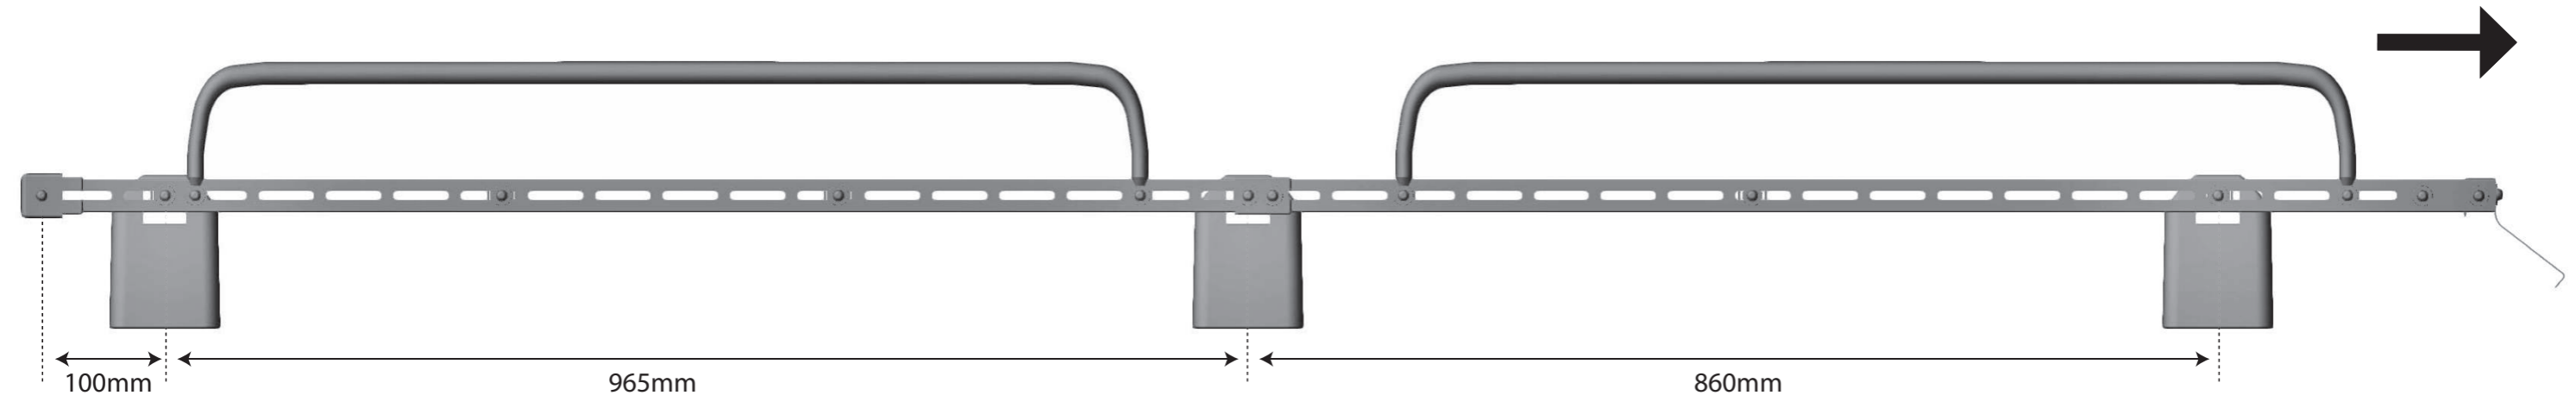


**VOLKSWAGEN CADDY III L2 (04-13)**

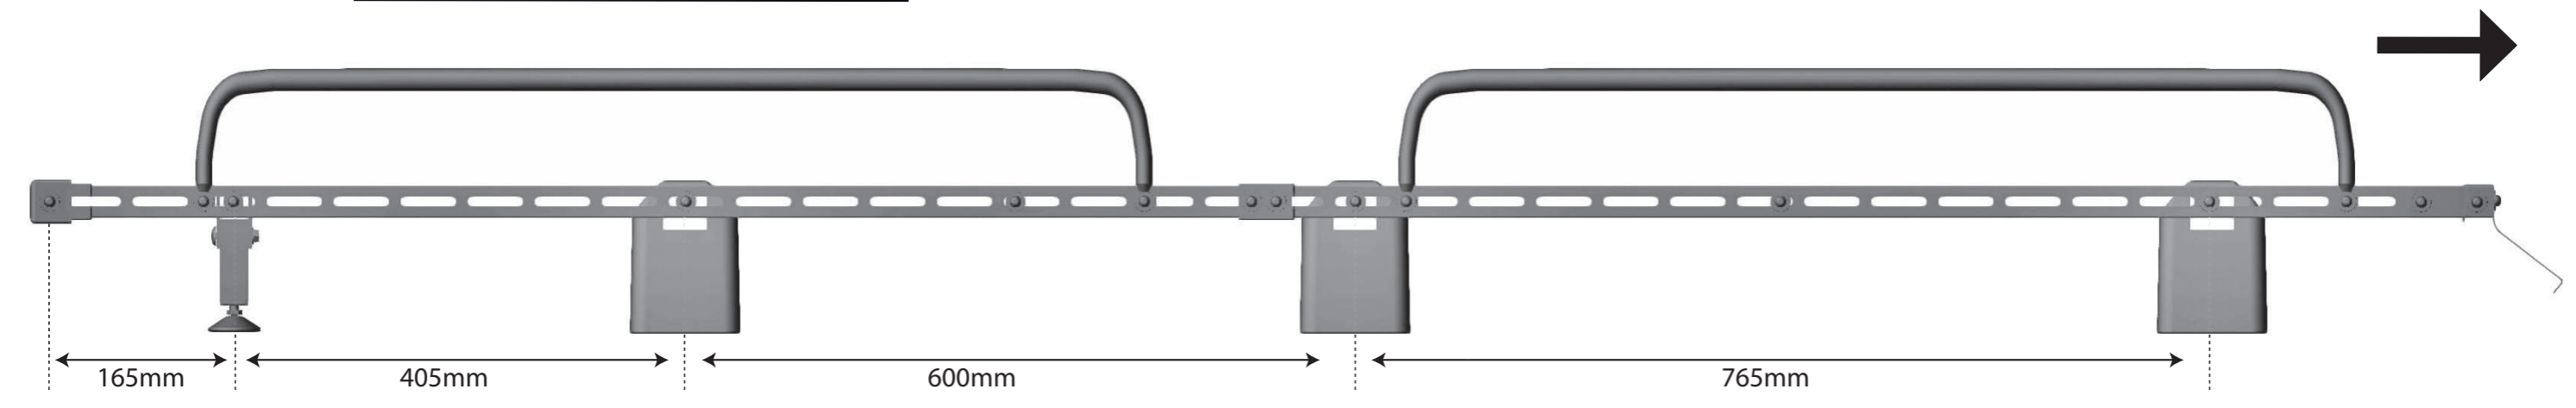


**VOLKSWAGEN CADDY III.2 / IV L1 (2011-)**

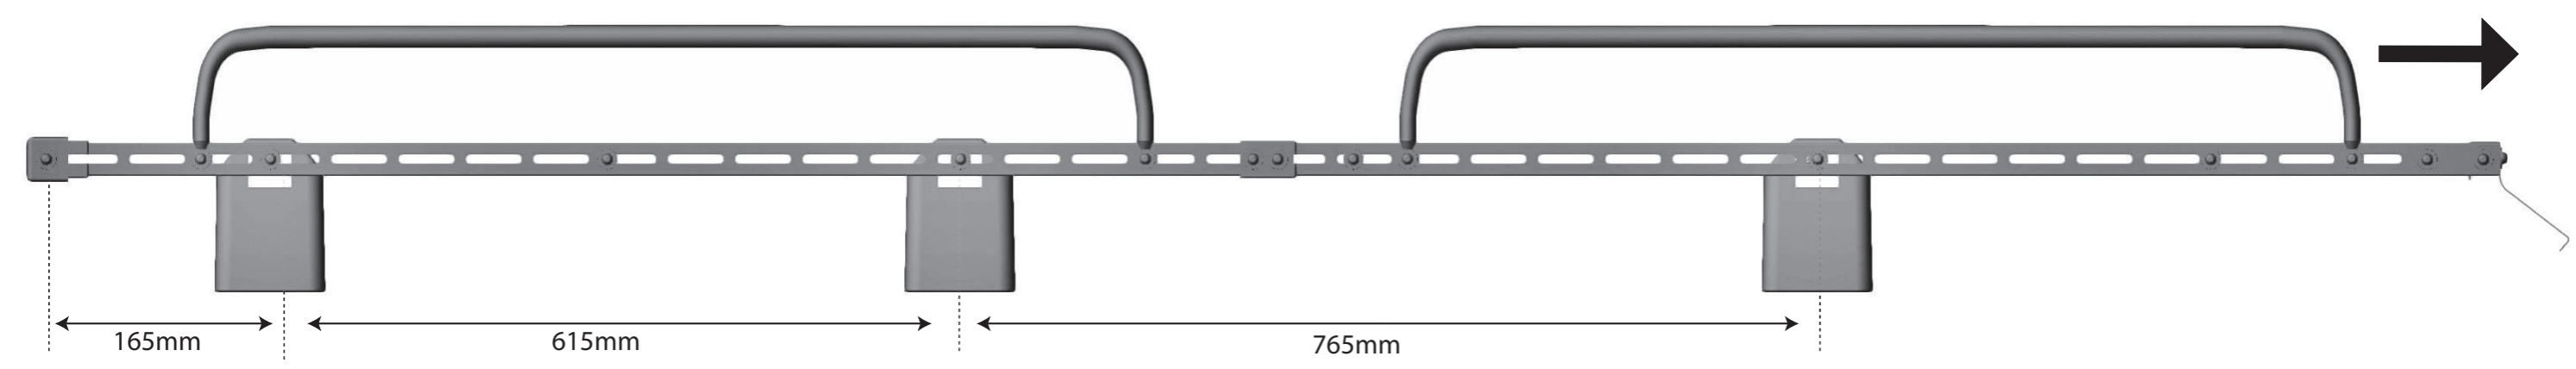









FOR CONNECT III L1 (2022->) / VOLKSWAGEN CADDY V L1 (2021->)

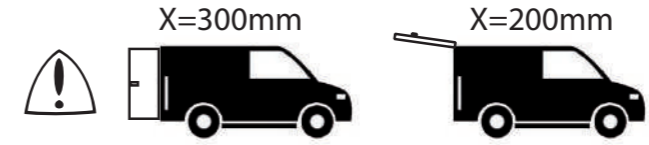


Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone


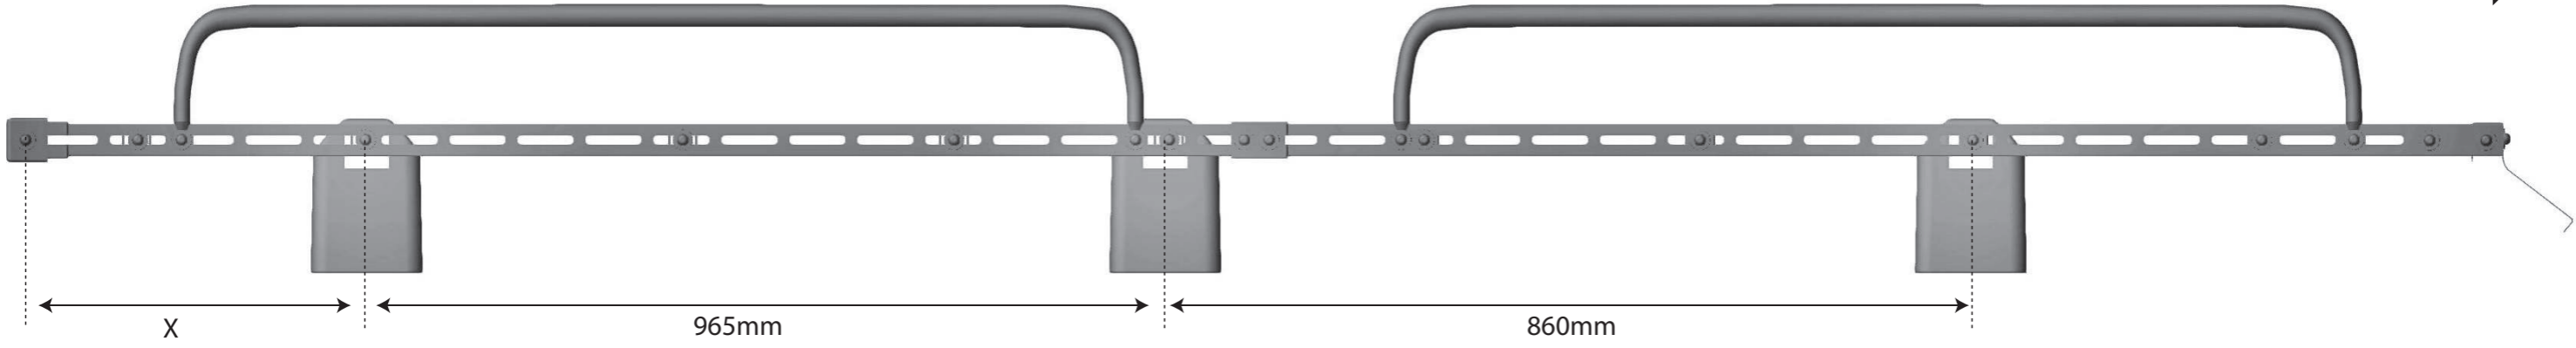




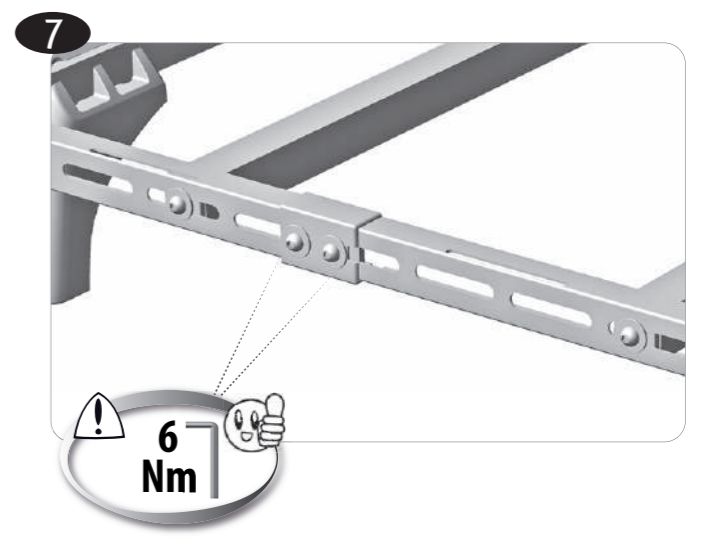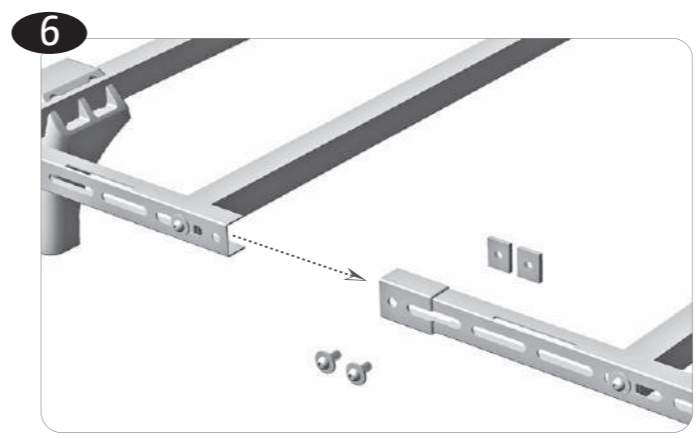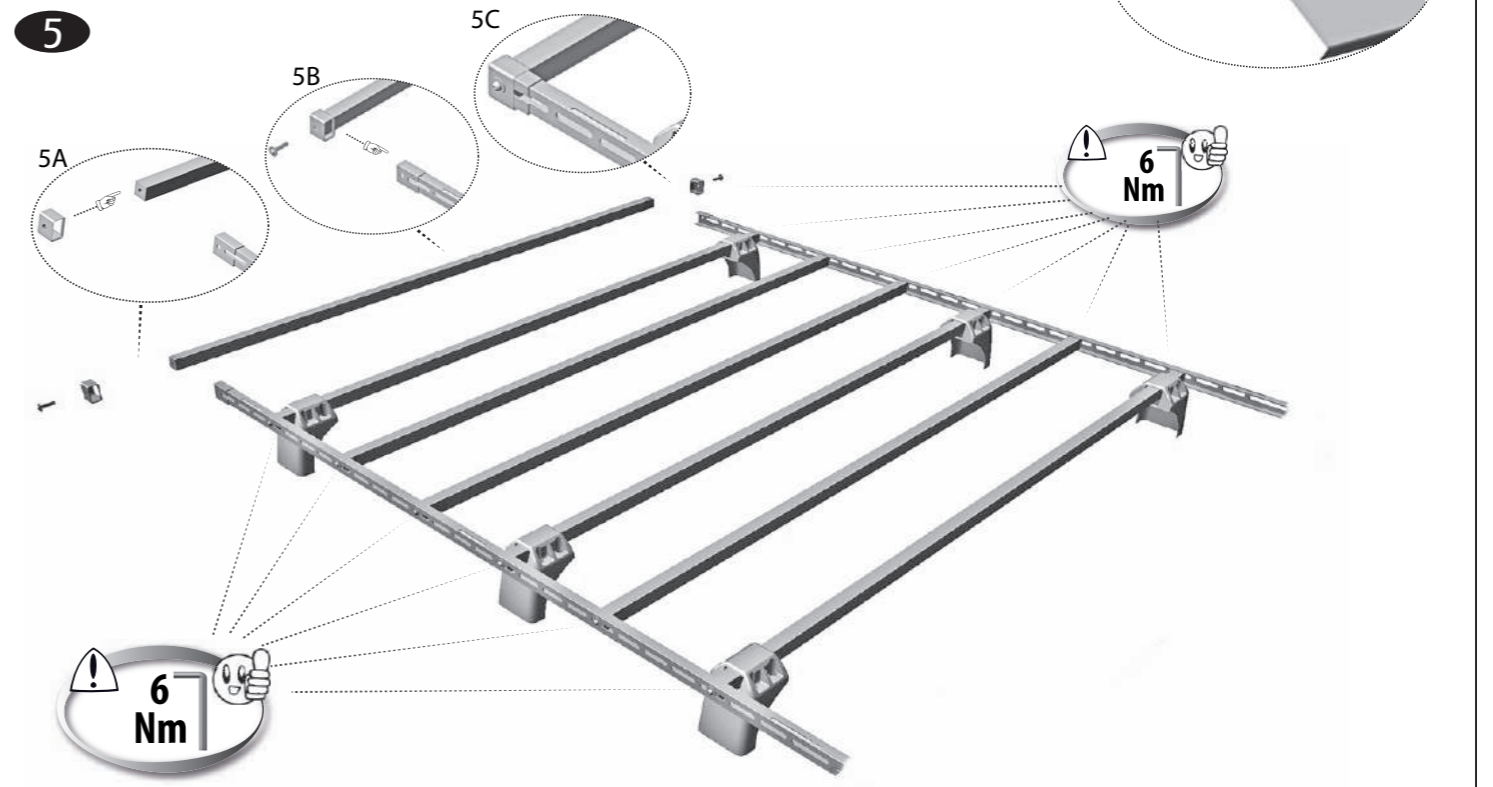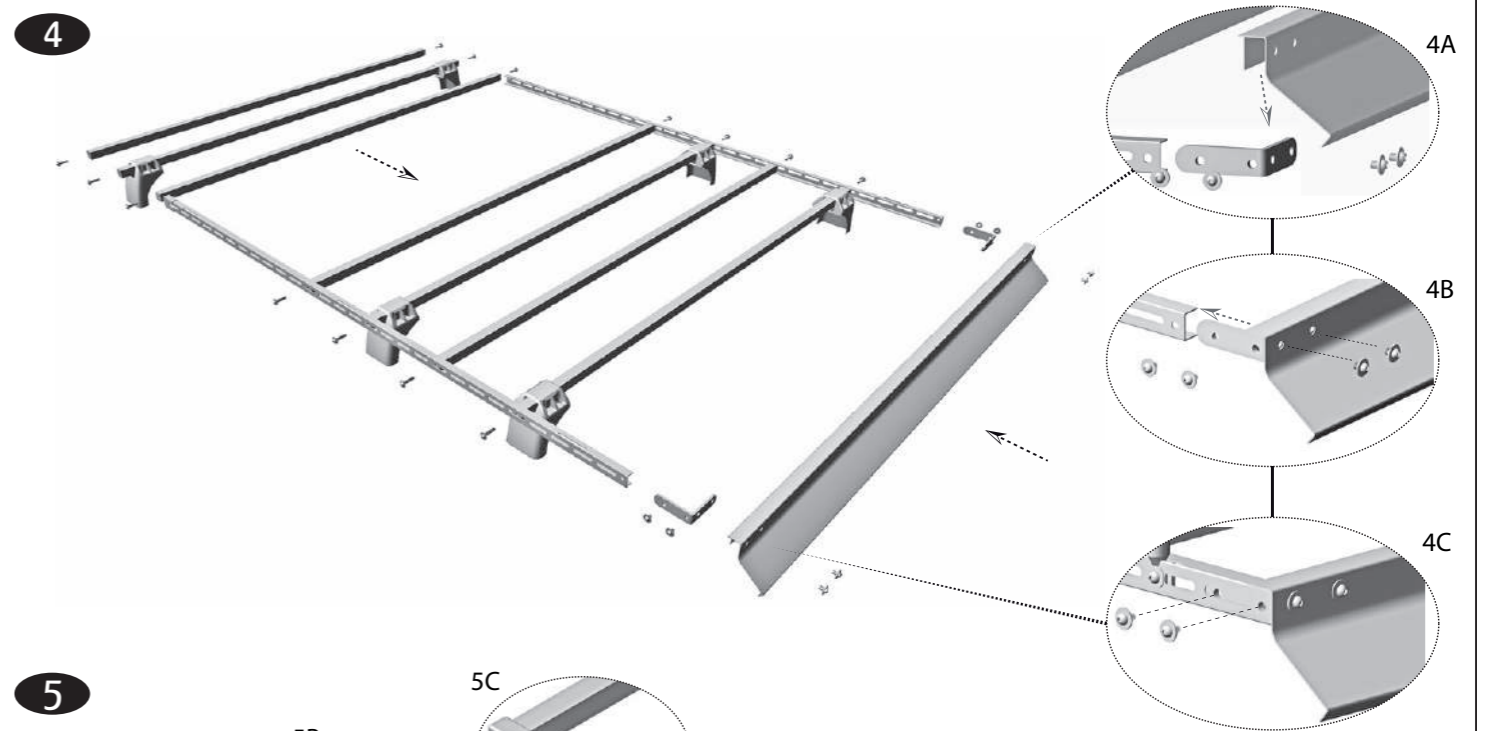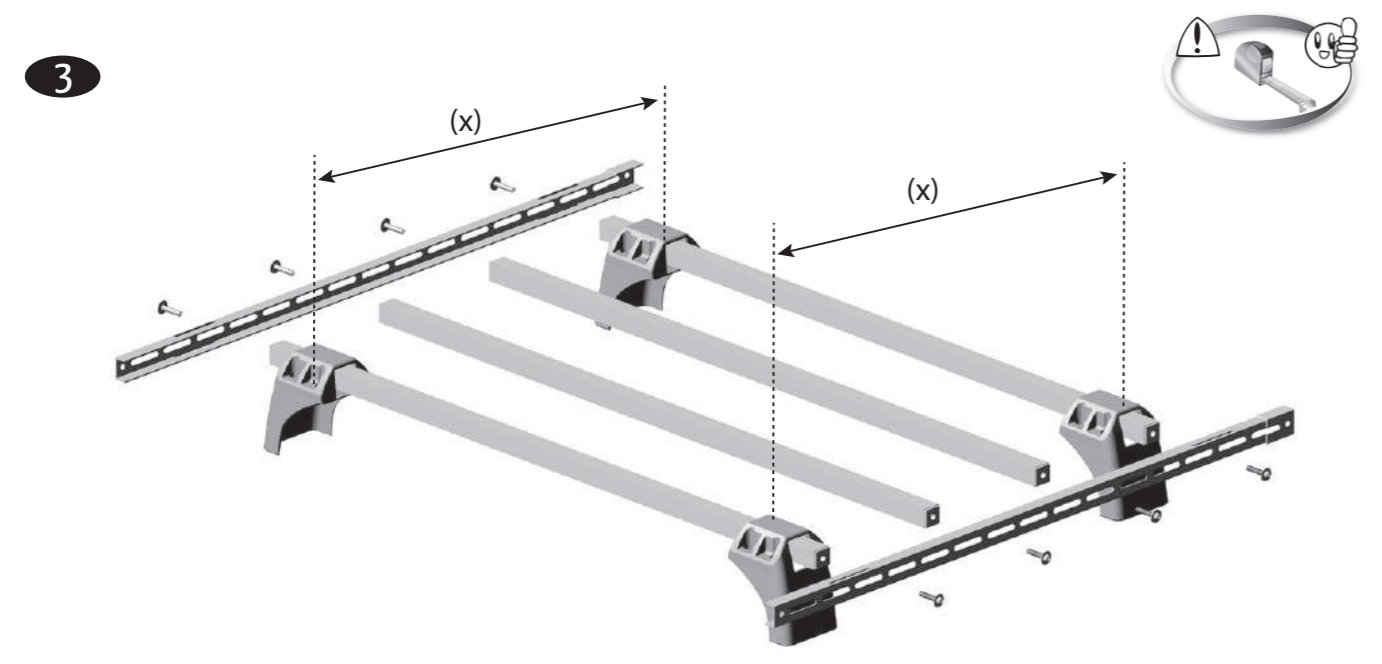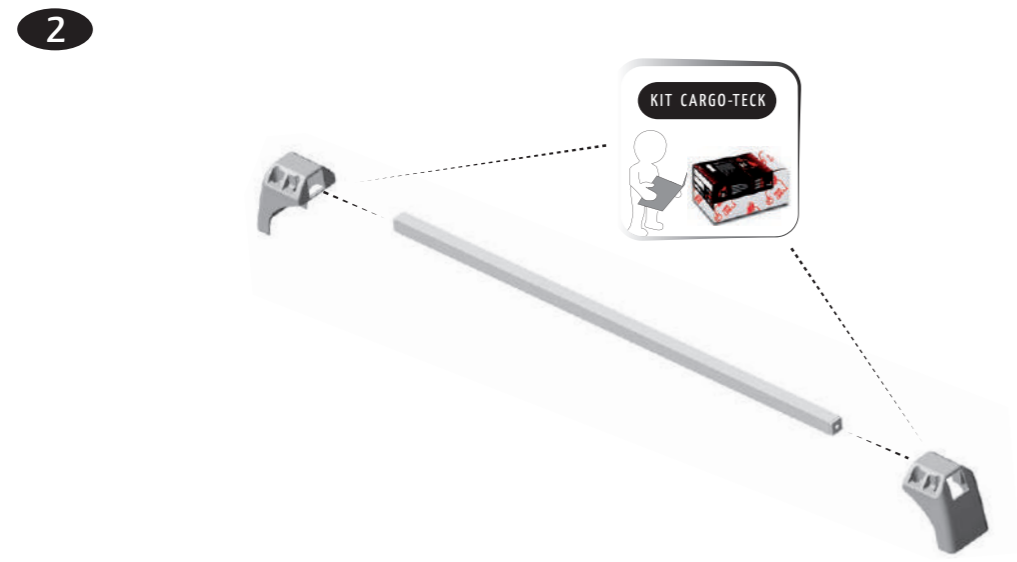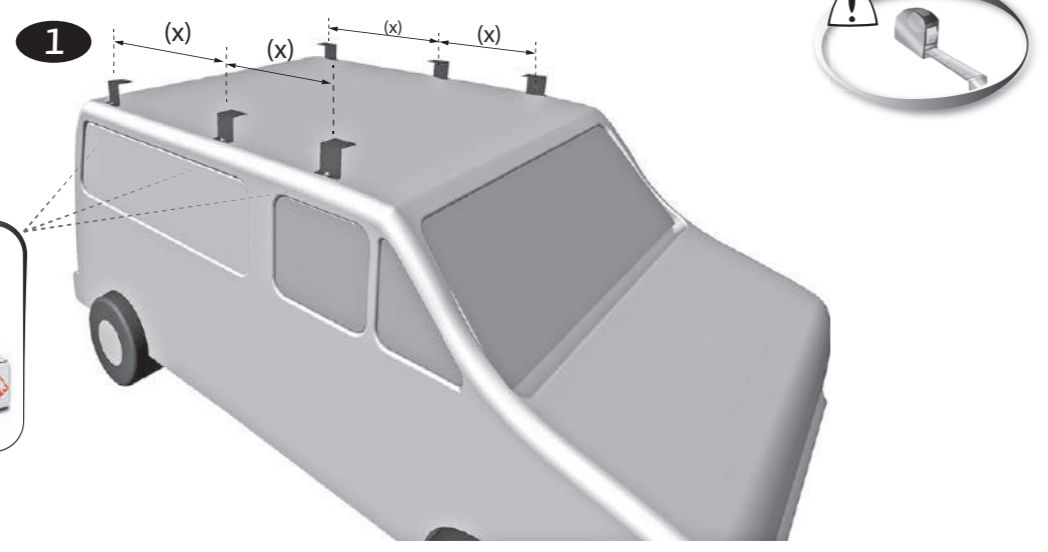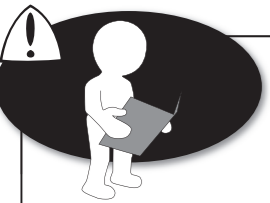



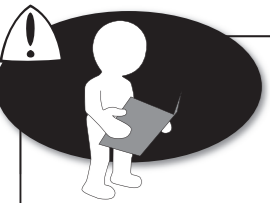


8

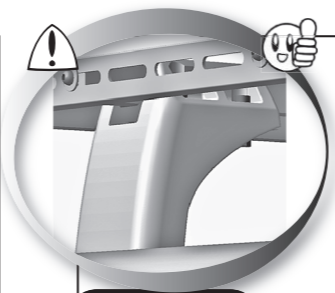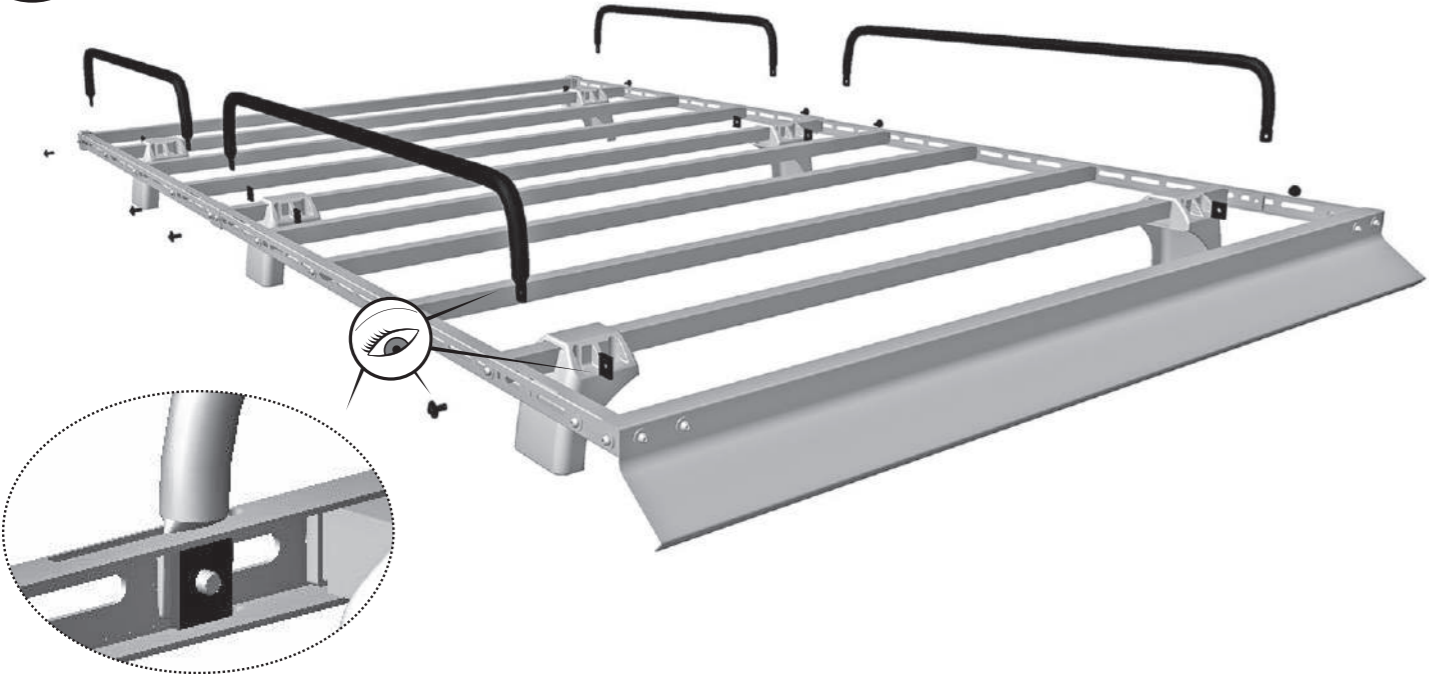



10

KIT CARGO-TECK

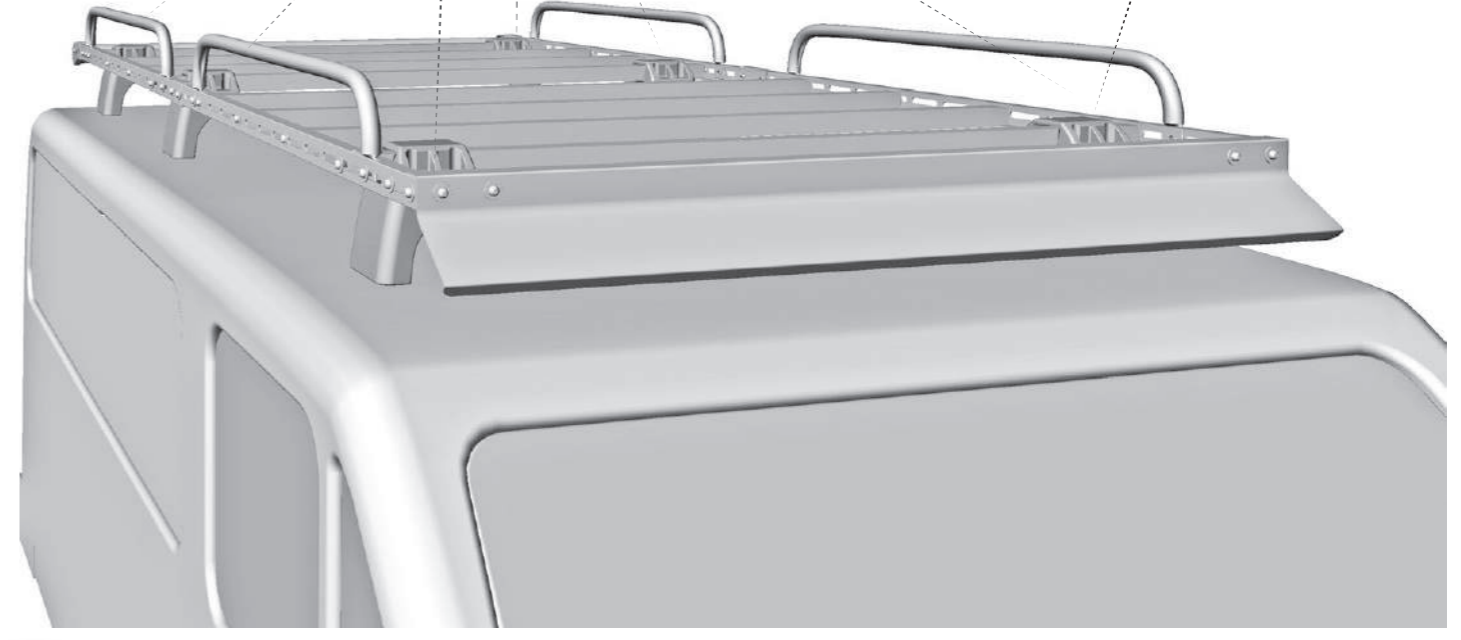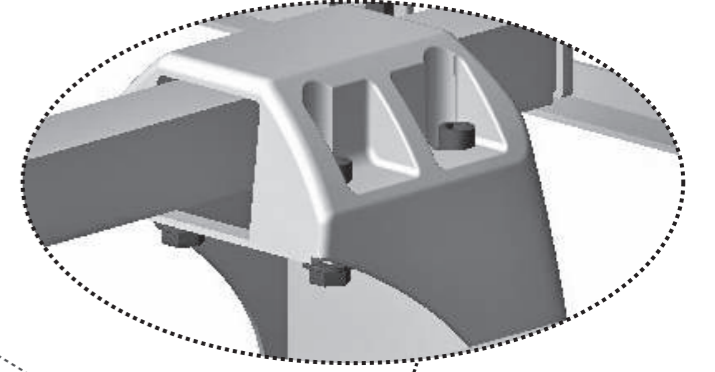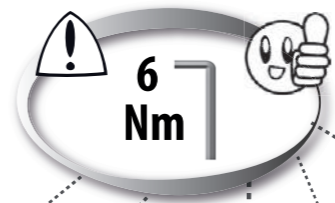

9

KIT CARGO-TECK

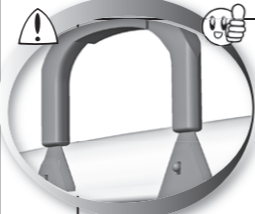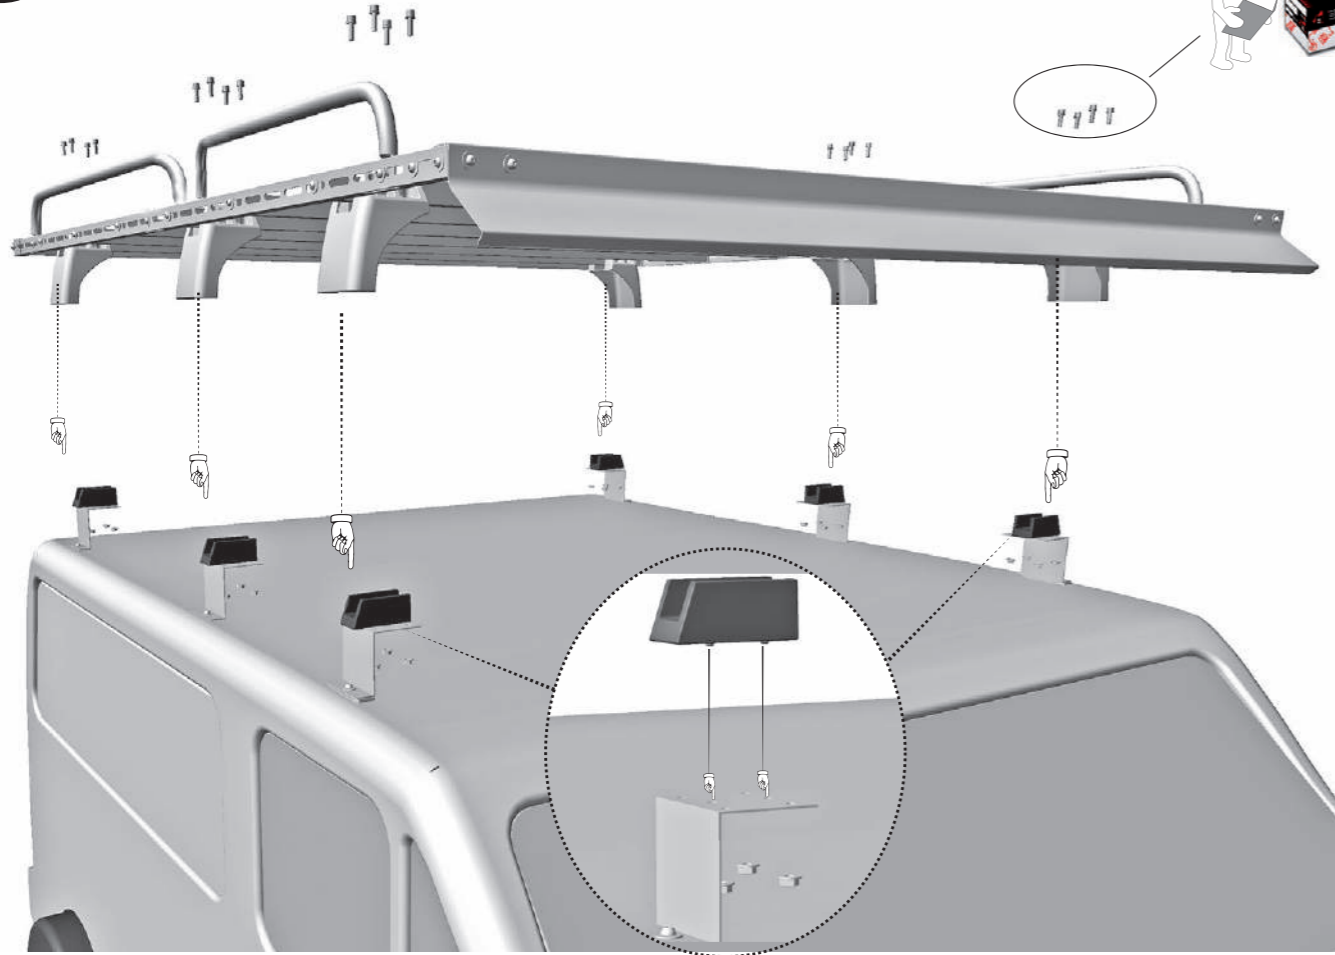

KIT CARGO-TECK FEET

10 bis

KIT CARGO-TECK FEET

