
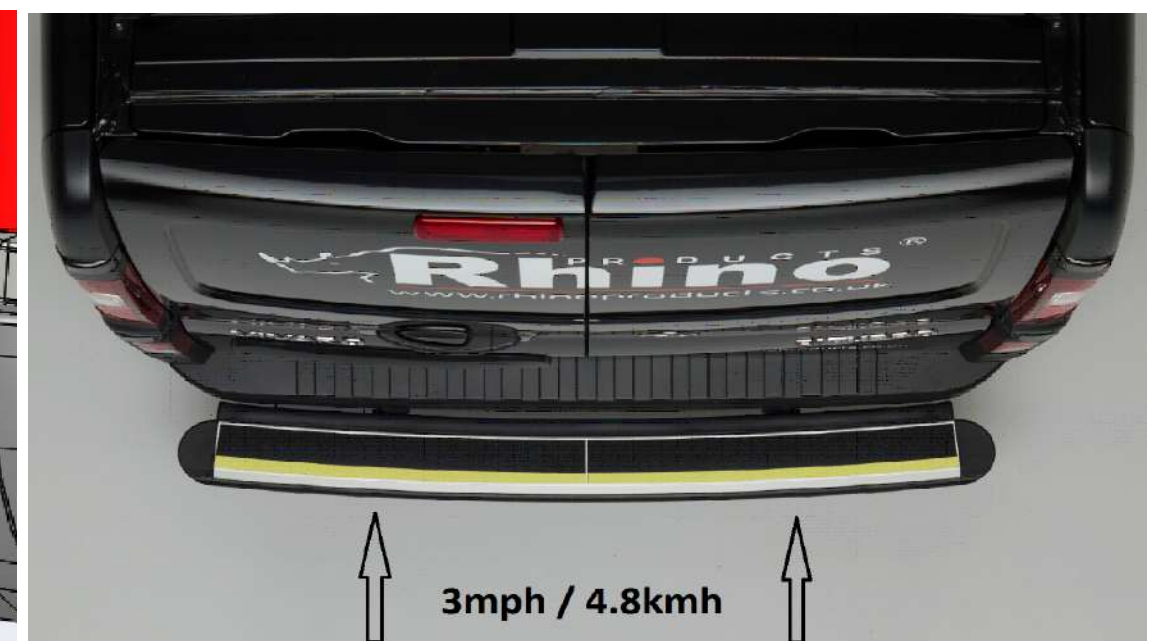


IMPACT STEP FITTING INSTRUCTIONS

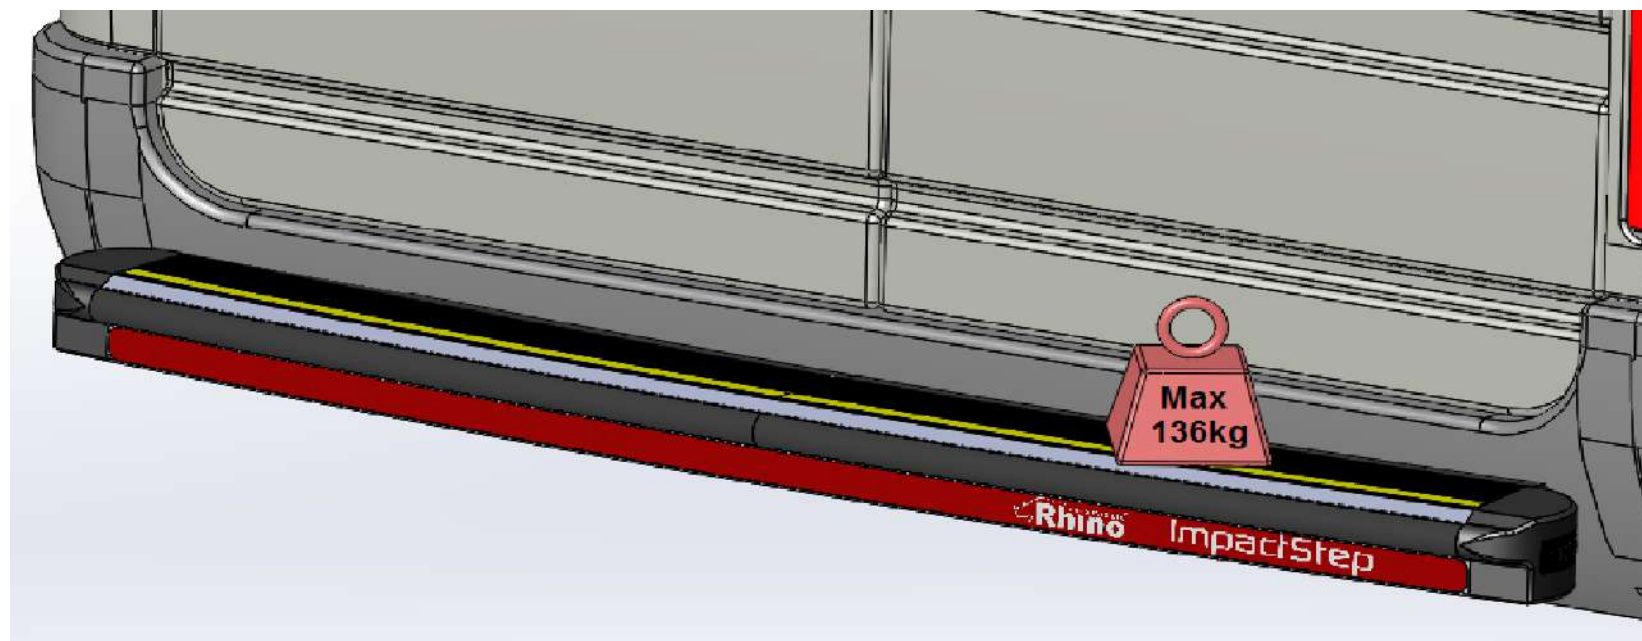

IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK888
(1:1)


1.




FW020 (M8) x 4



FB006 (M8 x 30) x 4

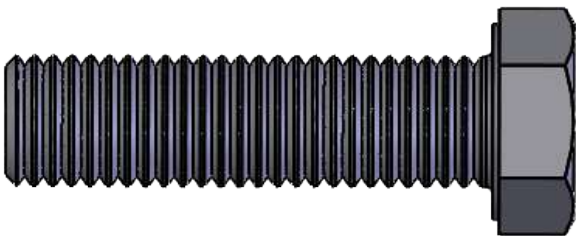


FS082 (M12 x 45) x 6

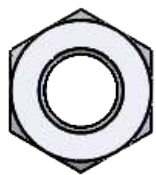


FN006 (M8) x 4

ACCESSSTEP	✓
IMPACT STEP	✗

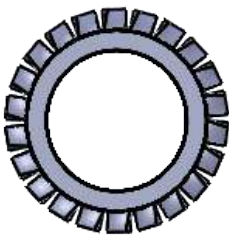


FW029 (M12) x 6

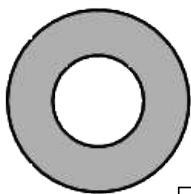

FW021 (M8) x


ACCESSSTEP	8
IMPACT STEP	4

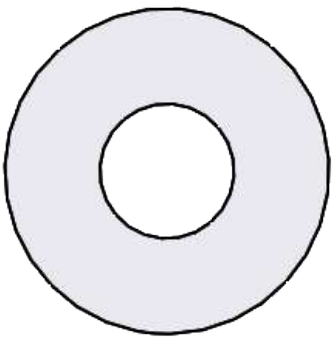

FW026 (M12) x 6

FITTING TIME: 40 Minutes

2.

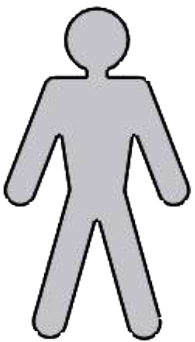


x 1



19mm x 1






13mm x 1

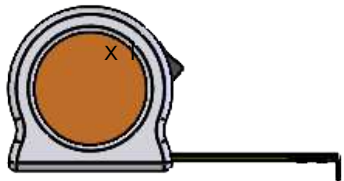

x 1

IMPACT STEP FITTING INSTRUCTIONS

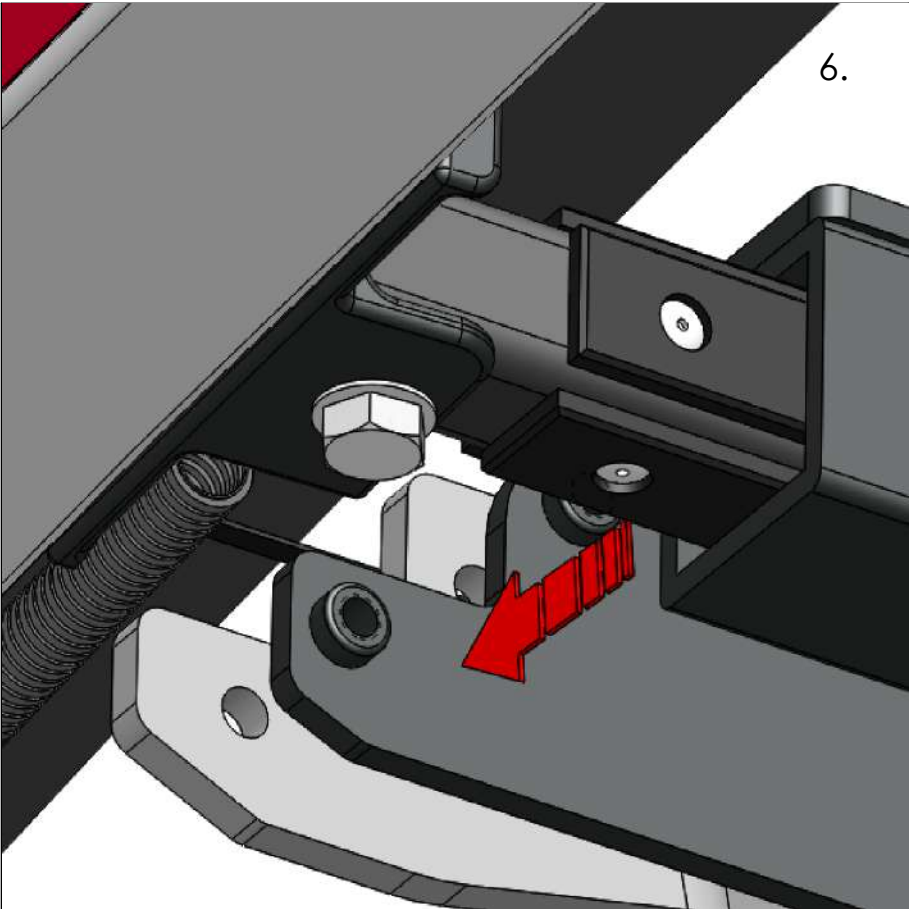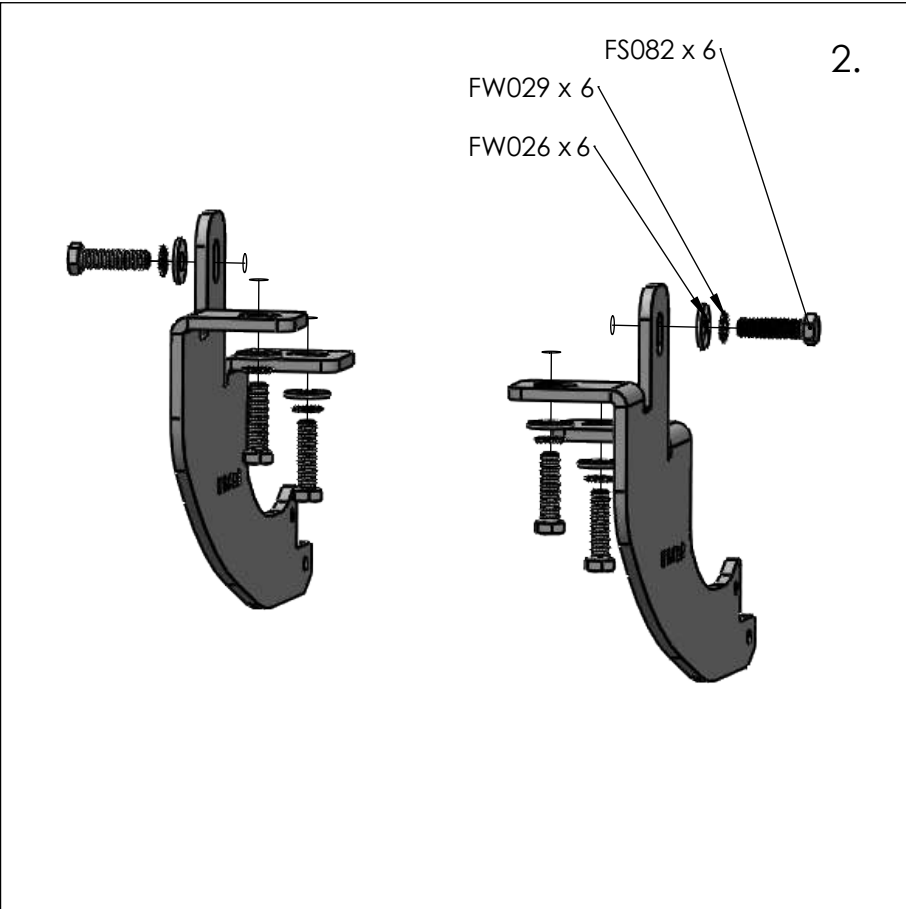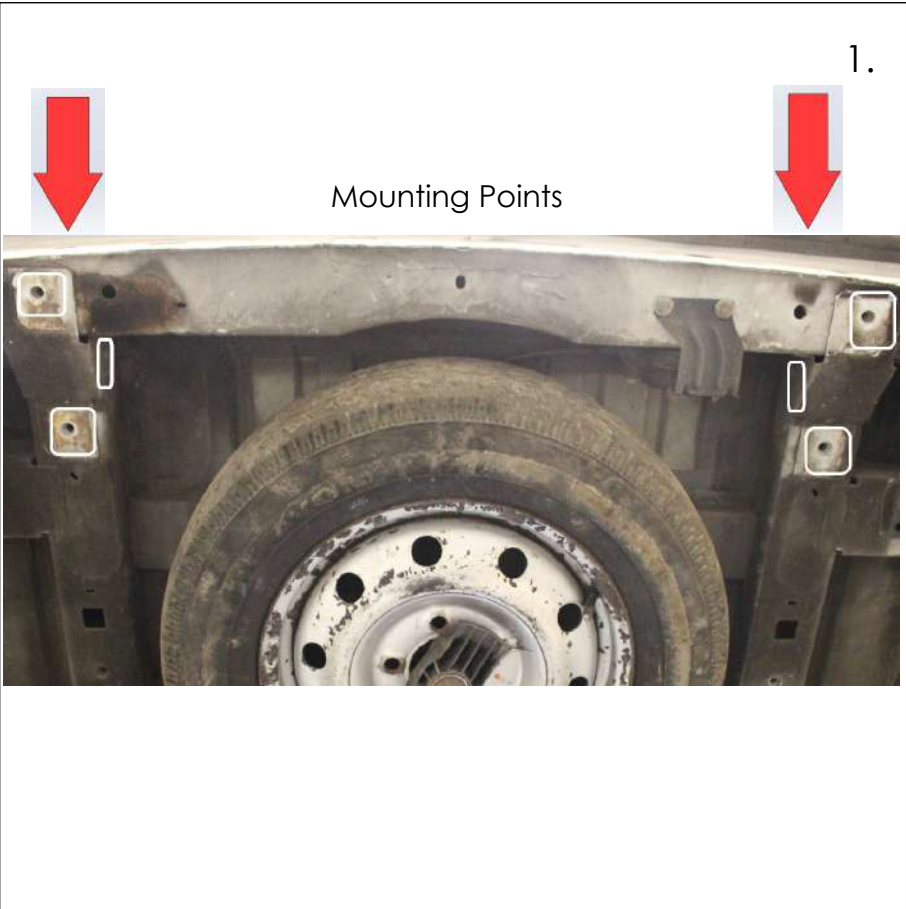

IMPACT STEP FITTING INSTRUCTIONS

