

# FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK952  
(1:1)

1.




FW020 (M8) x 4

SAFESTEP	✗
IMPACT STEP	✓

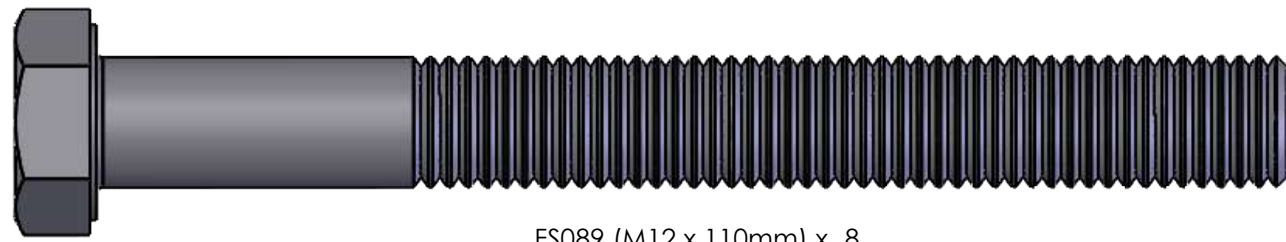


FS089 (M12 x 110mm) x 8

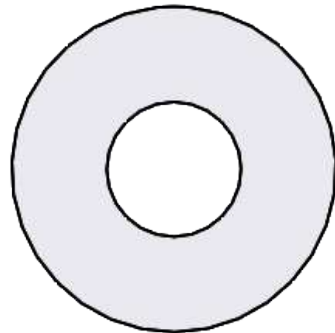


FW026 (M12) x 16



FN034 (M12) x 8

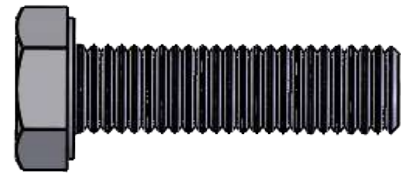

FB006 (M8 x 30mm) x 4

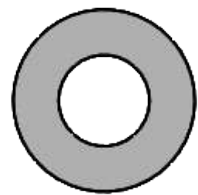


FW021 (M8) x 8



FN006 (M8) x 4

FITTING TIME: 20 Minutes

2.

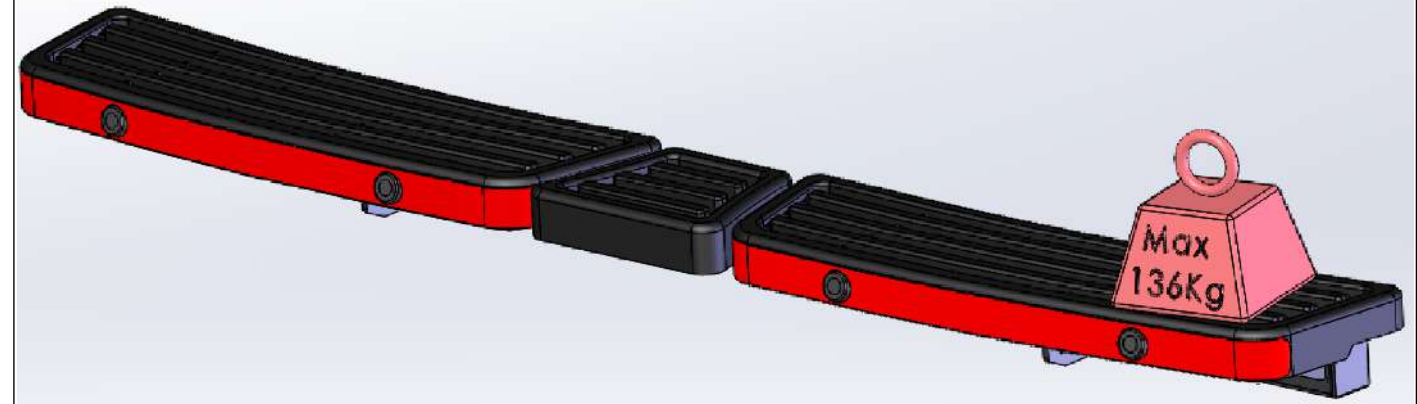

x 1




13mm x 1



19mm x 1



19mm x 1







18mm x 1



13mm x 1



FITTING INSTRUCTIONS

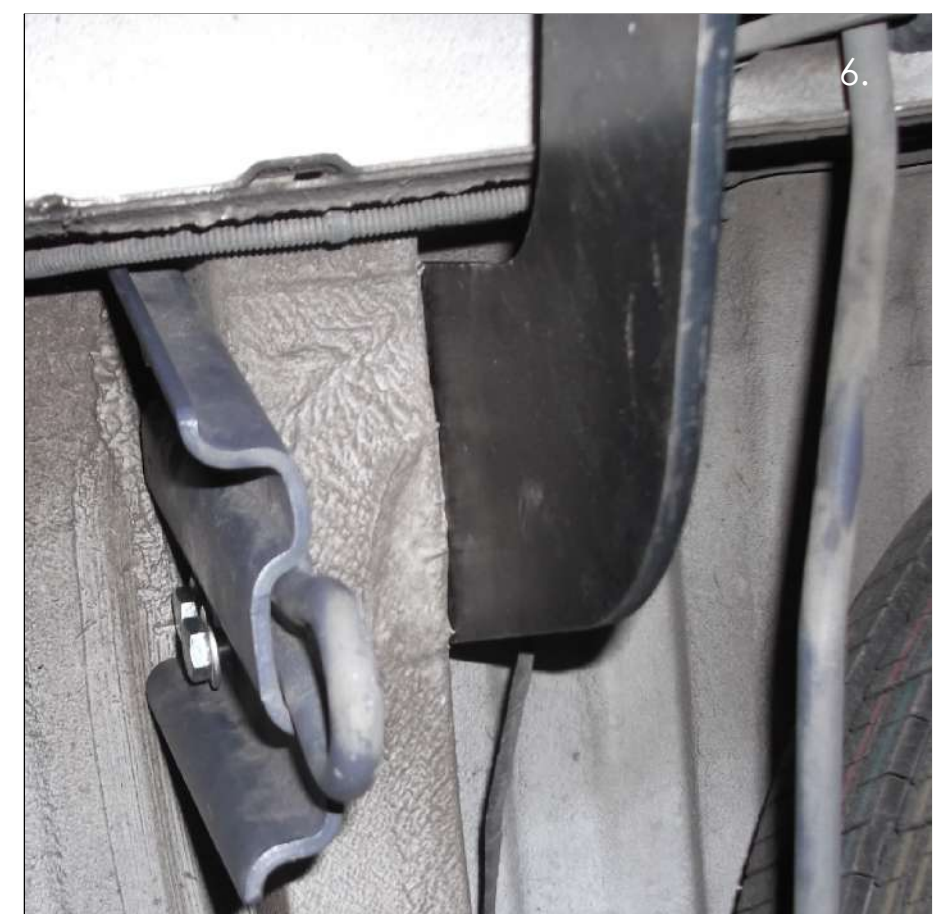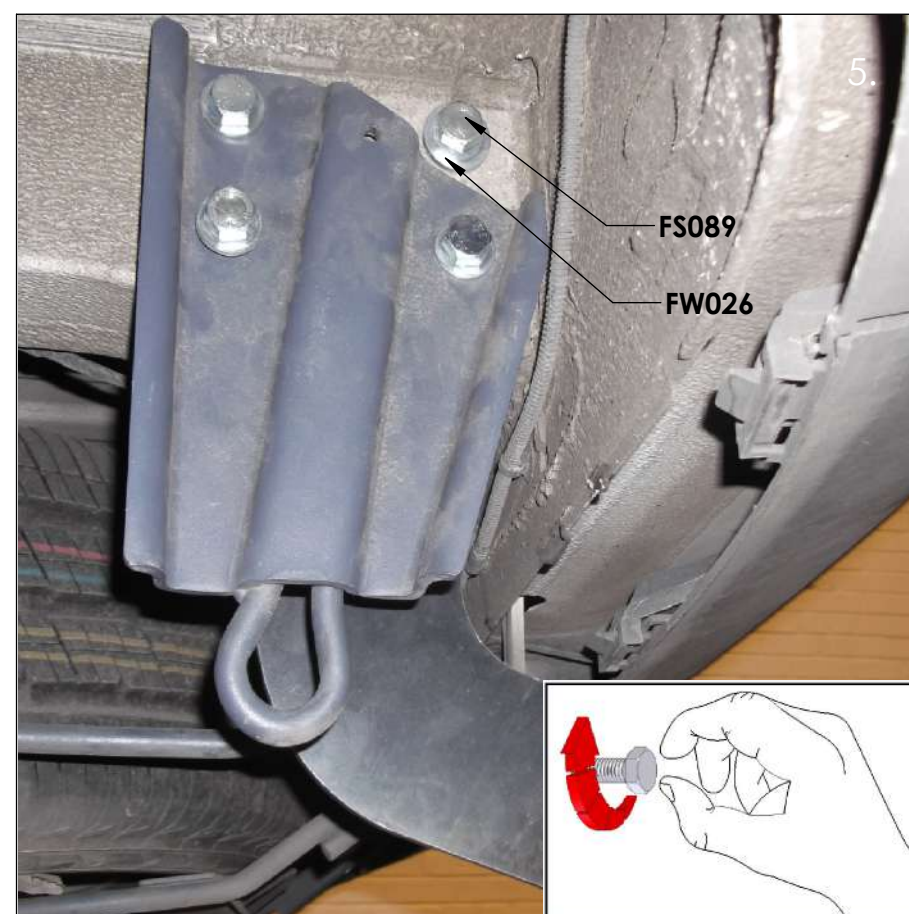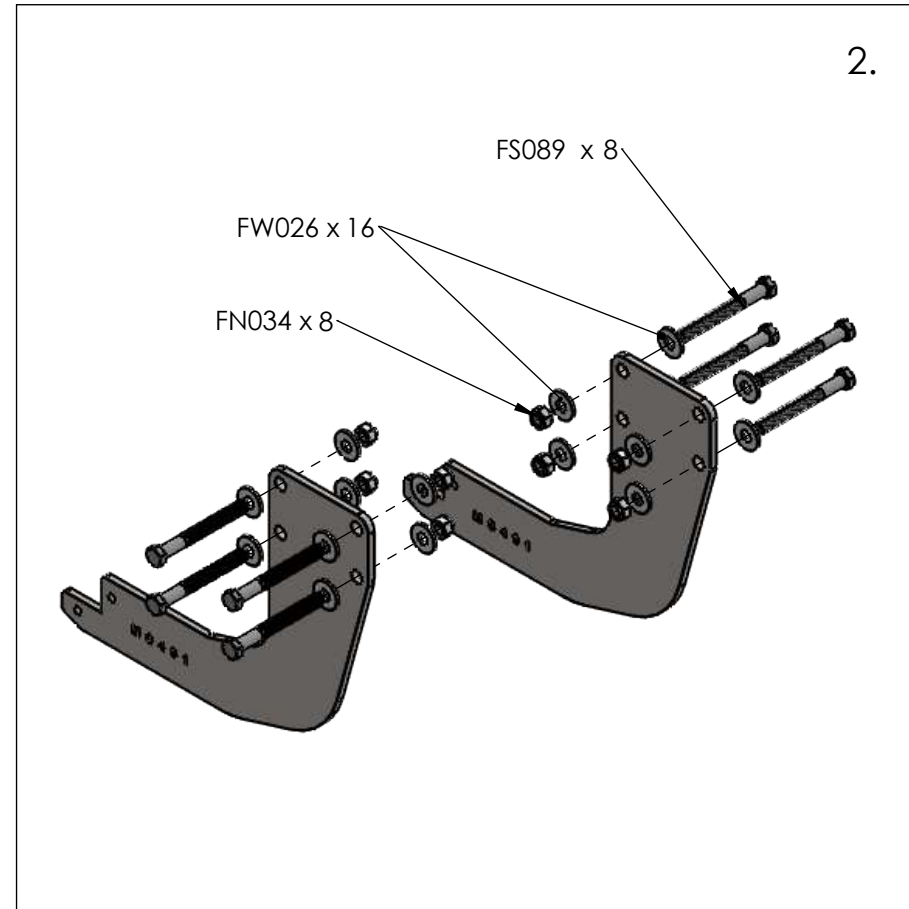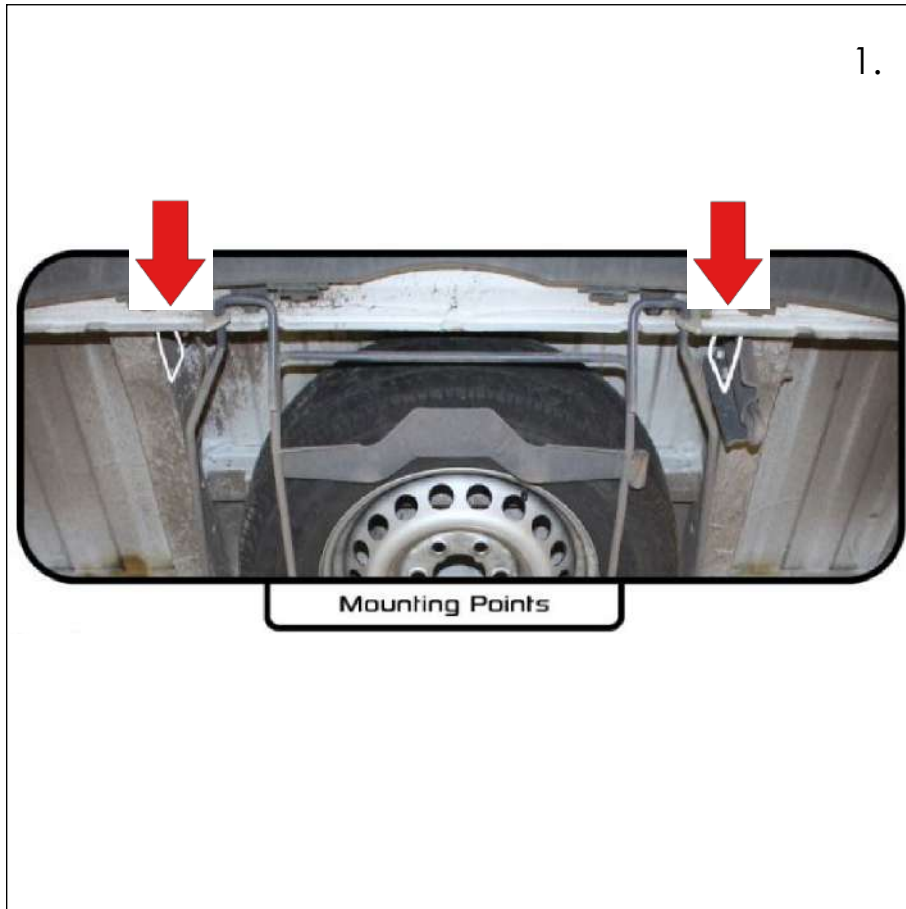



FITTING INSTRUCTIONS

